# cgFLOAT©

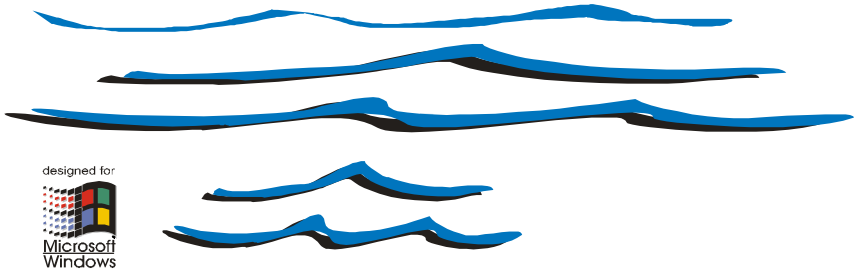

designed for Microsoft Windows

## *USER'S Manual*

RUNET®
software & expert systems

http://www.runet-software.com

© 2000-2006 RUNET Norway as

## Contents

**1. About cgFLOAT ..... 3**
**2. How to get started ..... 3**
*Short introduction ..... 3*
*Files ..... 4*
*Tools ..... 4*
**3. Running an example ..... 5**
*General data ..... 5*
*Load Correlation ..... 5*
*Pontoon Properties ..... 6*
*Connectors properties ..... 6*
*Hydrodynamic coefficients ..... 7*
*Wave data ..... 7*
*Computations ..... 8*
*Graphic results ..... 8*
**4. Structural Model ..... 9**
**5. Hydrodynamic Coefficients ..... 10**
*Hydrodynamic Mass ..... 12*
*Hydrodynamic Damping ..... 13*
*Hydrodynamic Exiting Force 4 ..... 14*
*Hydrodynamic Exiting Force 6 ..... 15*
*Hydrodynamic Exiting Force 8 ..... 16*
*Hydrodynamic Force ..... 17*
*Table 3.1 ..... 18*
*Table 3.2 ..... 18*
**6. Spatial Correlation of Nodal Loads ..... 19**
**7. Monte Carlo Simulation of Random Sea States ..... 20**
**8. Frequency Domain Analysis ..... 20**
**9. Time Domain Analysis ..... 23**
**10. Boat Wake Response ..... 24**
**11. Wave Coherence ..... 25**
**12. Examples ..... 26**
*Example 1 of Breakwater ..... 26*
*Example 2 of Breakwater ..... 29*

13. List of Figures ..... 31
14. List of Symbols ..... 32
15. List of Tables ..... 33
16. References ..... 34
17. Documents ..... 35

# 1. About cgFLOAT

Although the structural modeling of a floating bridge or breakwater poses no particular difficulty, the implementation of the short crested waves in the nodal loads needs to be done carefully.
The response calculation can be done with existing computer programs (SAPIV, STRUDL, NASTRAN, ...) with additional help from other programs, to simulate the sea state and process the results. This procedure can prove to be time and money consuming, risking the opportunity of errors in the handling and transformation of the data.
The program cgFLOAT, combines fluid structure and stochastic process theories in one program. In this way the response computation of floating structures is reduced to a routine problem.

The following aspects have been implemented in the program:

1. Flexibility and ease of modeling with reduction of input data for floating bridges and breakwaters.
2. Continuous structures as well as structures with flexible connectors.
3. Frequency and time domain analysis.
4. Boat wake analysis.
5. Frequency dependent hydrodynamic coefficients.
6. Short-crested waves.
7. Wave Time series simulation from wave spectra.
8. Monte Carlo simulation of random sea state.
9. Programming optimisation for reduced cost and central memory requirements.
10. Graphical output of results in convenient format.

Following is a brief theoretical background of the program (more in this can be found in ref. 6)
Additional publications, references 25 to 34.
Verification of the accuracy of the program has been done with the response of the original Hood-Canal bridge for which there exist actual field measurements under various wave loadings, Ref. [9, 10, 18].

# 2. How to get started

## *Short introduction*

You run **cgFLOAT**. Open a file in a folder you choose.
In cgFLOAT you complete all the data in the corresponding pages. (General, Load correlation, pontoons, connectors, Hydr. Coefficients, Wave data ).
In the page Computations, by pressing **Run Float**, the FLOAT computational modulus is running and the output is created and text shows on the screen. You can preview the output file with Note-Pad or Word with the corresponding buttons.
In the page Graphics you can see the graphical output (mode shapes, frequency domain, and time domain analysis), by pressing the button Show Graphs.
It will be helpful to follow the examples in the \DOC\Examples\ pdf or word files.
With the menu [Tools/Unit Conversion], and [Tools/Cross Section Areas] extra tools to help you converting units or to compute cross-section areas are included.

## *Files*

The program is installed in a folder \cgFLOAT. Inside this folder a subfolder \Examples is created, where some examples are included and a folder \Projects, where you may create your project files.

The files in the folder \cgFLOAT are :
**FLOAT**, [Dos application (32 bit)]. The main solution modulus of program FLOAT.
This program runs with Input a text file FL_IN.TXT and produces an output text file FL_OUT.TXT. Both these files are in the same directory with FLOAT.
The Input file structure is described in the program users manual. In this user manual, the word Card means a Line in the text input file. The data in this file must be input in strict format as it is described in the program users manual.

**cgFLOAT**, [Windows application (32 bit)].
By running this program you create the input text file. The Float program runs automatically from inside cgFLOAT and consequently you obtain the output text file. cgFLOAT creates its own data file in a folder the user specifies. The main file with the data has the form FileName.FDT.
cgFLOAT also creates in the same folder with the FileName.FDT, the files FileName_INP.TXT and FileName_OUT.TXT files that are the input and output file of the program FLOAT. So to work with the results you simply open with a text editor the file File_Name_OUT.TXT.

**\Examples**
Example01: floating breakwater with rigid connectors. Loading, standard spectrum.
Example02: floating breakwater with rigid connectors. Loading, standard spectrum.
Example03: floating breakwater with flexible. Loading, standard spectrum.
Example04: floating breakwater rigid connectors. Unequal pontoons
Example05: floating breakwater with flexible connectors. Unequal pontoons

In the folder \Doc for each example a doc or a pdf file is included with step-by-step directions of how to run the program with the particular example.

## *Tools*

From the menu Tools:

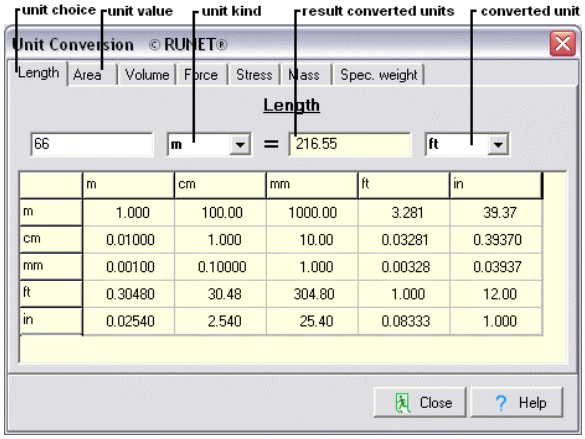


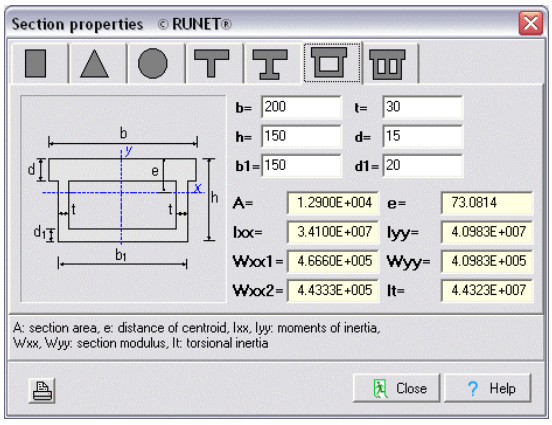

# 3. Running an example

## *General data*

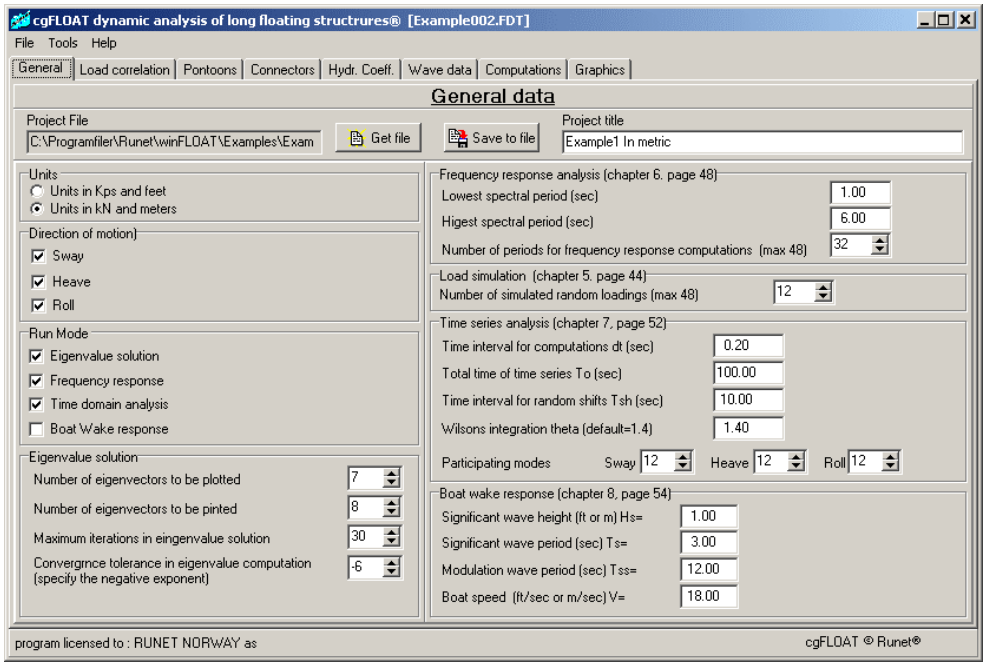
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
General data
Project File
C:\Programfiler\Runet\winFLOAT\Examples\Exam
Get file
Save to file
Project title
Example1 In metric
Units
Units in Kps and feet
Units in kN and meters
Direction of motion)
Sway
Heave
Roll
Run Mode
Eigenvalue solution
Frequency response
Time domain analysis
Boat Wake response
Eigenvalue solution
Number of eigenvectors to be plotted 7
Number of eigenvectors to be pinted 8
Maximum iterations in eingenvalue solution 30
Convergrnce tolerance in eigenvalue computation (specify the negative exponent) -6
Frequency response analysis (chapter 6, page 48)
Lowest spectral period (sec) 1.00
Higest spectral period (sec) 6.00
Number of periods for frequency response computations (max 48) 32
Load simulation (chapter 5, page 44)
Number of simulated random loadings (max 48) 12
Time series analysis (chapter 7, page 52)
Time interval for computations dt (sec) 0.20
Total time of time series To (sec) 100.00
Time interval for random shifts Tsh (sec) 10.00
Wilsons integration theta (default=1.4) 1.40
Participating modes Sway 12 Heave 12 Roll 12
Boat wake response (chapter 8, page 54)
Significant wave height (ft or m) Hs= 1.00
Significant wave period (sec) Ts= 3.00
Modulation wave period (sec) Tss= 12.00
Boat speed (ft/sec or m/sec) V= 18.00
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

After you open the file, the data are saved at various moments automatically.
Chapters Frequency Domain Analysis, Time Domain Analysis,Boat Wake Response explain the methods of analysis.

## *Load Correlation*

The Load Correlation is explained in Spatial Correlation of Nodal Loads

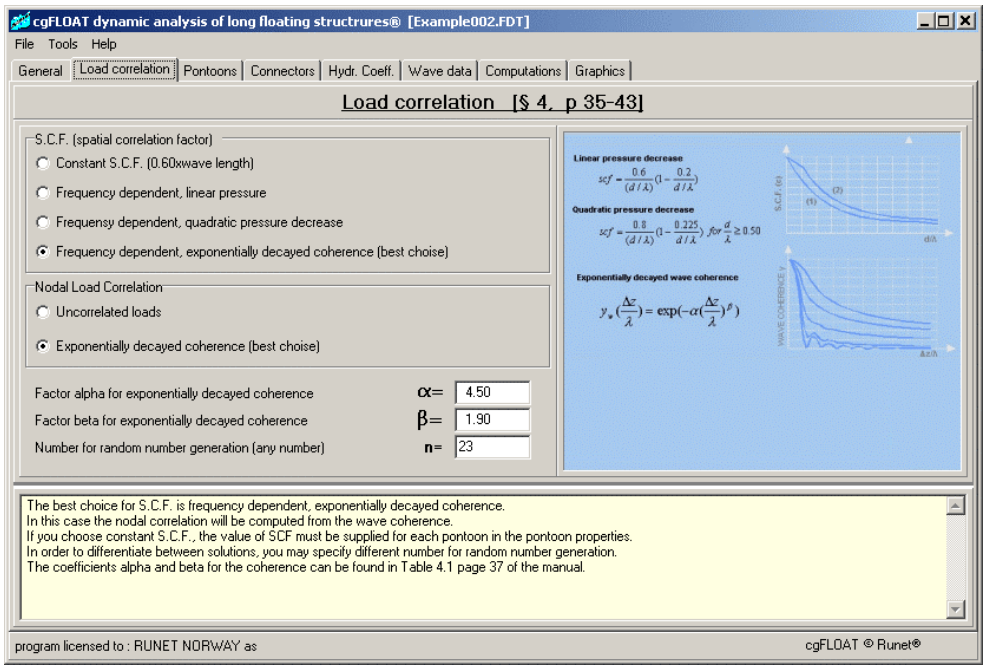
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Load correlation [§ 4, p 35-43]
S.C.F. (spatial correlation factor)
Constant S.C.F. (0.60xwave length)
Frequency dependent, linear pressure
Frequensy dependent, quadratic pressure decrease
Frequency dependent, exponentially decayed coherence (best choise)
Nodal Load Correlation
Uncorrelated loads
Exponentially decayed coherence (best choise)
Factor alpha for exponentially decayed coherence α= 4.50
Factor beta for exponentially decayed coherence β= 1.90
Number for random number generation (any number) n= 23
Linear pressure decrease
Quadratic pressure decrease
Exponentially decayed wave coherence
The best choice for S.C.F. is frequency dependent, exponentially decayed coherence.
In this case the nodal correlation will be computed from the wave coherence.
If you choose constant S.C.F., the value of SCF must be supplied for each pontoon in the pontoon properties.
In order to differentiate between solutions, you may specify different number for random number generation.
The coefficients alpha and beta for the coherence can be found in Table 4.1 page 37 of the manual.
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

## *Pontoon Properties*

The structural model is explained in Structural Model
Pontoons Properties

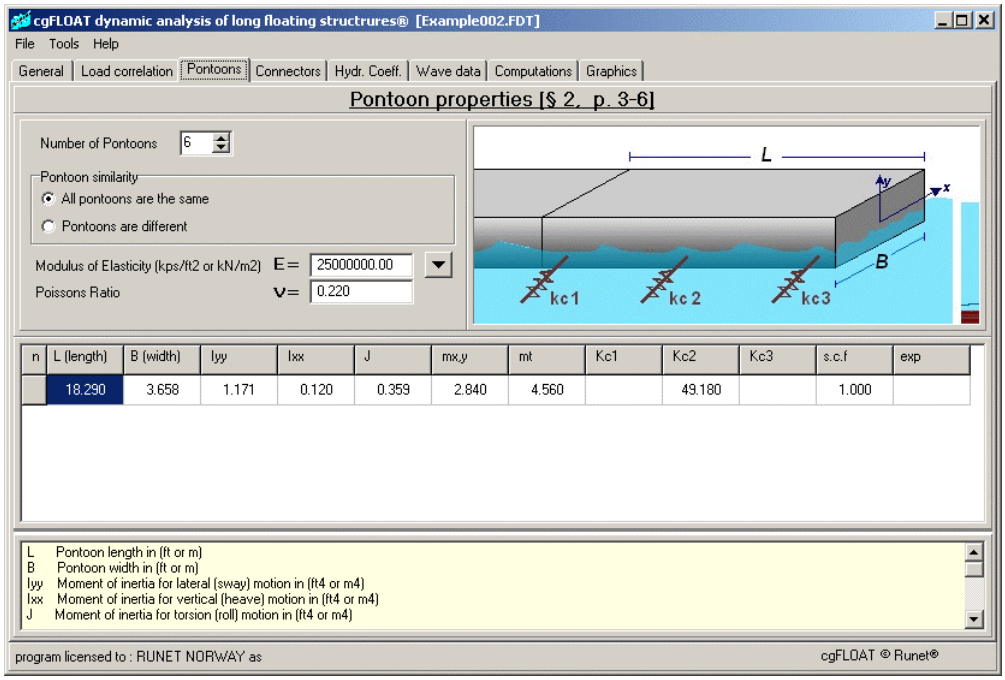
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Pontoon properties [§ 2, p. 3-6]
Number of Pontoons 6
Pontoon similarity
All pontoons are the same
Pontoons are different
Modulus of Elasticity (kps/ft2 or kN/m2) E= 25000000.00
Poissons Ratio ν= 0.220
L
B
kc1
kc2
kc3
n L (length) B (width) Iyy Ixx J mx,y mt Kc1 Kc2 Kc3 s.c.f exp
18.290 3.658 1.171 0.120 0.359 2.840 4.560 49.180 1.000
L Pontoon length in (ft or m)
B Pontoon width in (ft or m)
Iyy Moment of inertia for lateral (sway) motion in (ft4 or m4)
Ixx Moment of inertia for vertical (heave) motion in (ft4 or m4)
J Moment of inertia for torsion (roll) motion in (ft4 or m4)
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

## *Connectors properties*

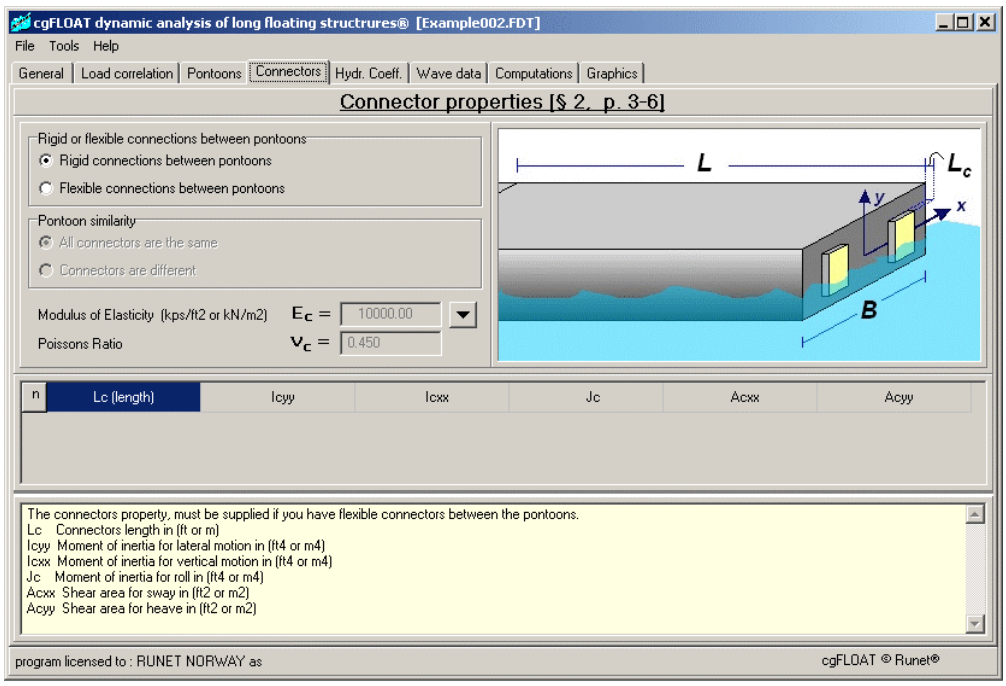
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Connector properties [§ 2, p. 3-6]
Rigid or flexible connections between pontoons
Rigid connections between pontoons
Flexible connections between pontoons
Pontoon similarity
All connectors are the same
Connectors are different
Modulus of Elasticity (kps/ft2 or kN/m2) Ec = 10000.00
Poissons Ratio νc = 0.450
L
Lc
B
n Lc (length) Icyy Icxx Jc Acxx Acyy
The connectors property, must be supplied if you have flexible connectors between the pontoons.
Lc Connectors length in (ft or m)
Icyy Moment of inertia for lateral motion in (ft4 or m4)
Icxx Moment of inertia for vertical motion in (ft4 or m4)
Jc Moment of inertia for roll in (ft4 or m4)
Acxx Shear area for sway in (ft2 or m2)
Acyy Shear area for heave in (ft2 or m2)
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

## *Hydrodynamic coefficients*

The values for the hydrodynamic coefficients are created automatically by pressing the button Generate Values. Chapter 3 of the users manual has the corresponding tables of hydrodynamic coefficients. The values for the added mass are (1+β ) where b the values of the tables, (structural mass + added mass)/structural mass.

More about hydrodynamic coefficients

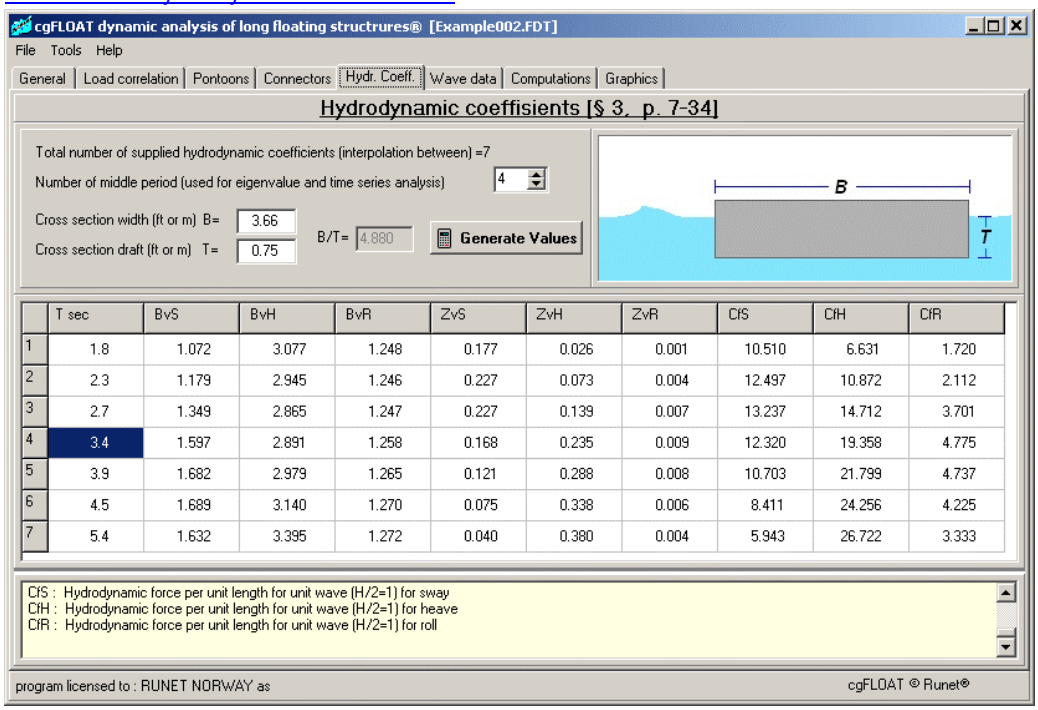
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Hydrodynamic coeffisients [§ 3, p. 7-34]
Total number of supplied hydrodynamic coefficients (interpolation between) =7
Number of middle period (used for eigenvalue and time series analysis) 4
Cross section width (ft or m) B= 3.66
Cross section draft (ft or m) T= 0.75
B/T= 4.880
Generate Values
B
T
T sec BvS BvH BvR ZvS ZvH ZvR CfS CfH CfR
1 1.8 1.072 3.077 1.248 0.177 0.026 0.001 10.510 6.631 1.720
2 2.3 1.179 2.945 1.246 0.227 0.073 0.004 12.497 10.872 2.112
3 2.7 1.349 2.865 1.247 0.227 0.139 0.007 13.237 14.712 3.701
4 3.4 1.597 2.891 1.258 0.168 0.235 0.009 12.320 19.358 4.775
5 3.9 1.682 2.979 1.265 0.121 0.288 0.008 10.703 21.799 4.737
6 4.5 1.689 3.140 1.270 0.075 0.338 0.006 8.411 24.256 4.225
7 5.4 1.632 3.395 1.272 0.040 0.380 0.004 5.943 26.722 3.333
CfS : Hydrodynamic force per unit length for unit wave (H/2=1) for sway
CfH : Hydrodynamic force per unit length for unit wave (H/2=1) for heave
CfR : Hydrodynamic force per unit length for unit wave (H/2=1) for roll
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

## *Wave data*

Boat Wake Response

Wave Coherence

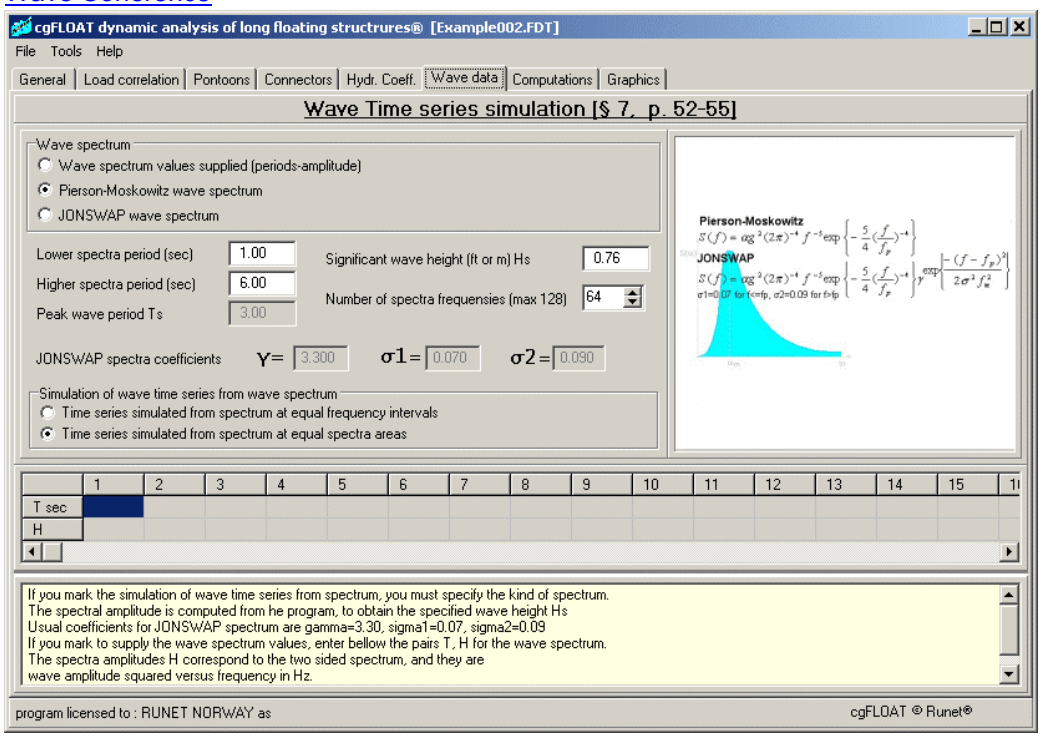
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Wave Time series simulation [§ 7, p. 52-55]
Wave spectrum
Wave spectrum values supplied (periods-amplitude)
Pierson-Moskowitz wave spectrum
JONSWAP wave spectrum
Lower spectra period (sec) 1.00
Higher spectra period (sec) 6.00
Peak wave period Ts 3.00
Significant wave height (ft or m) Hs 0.76
Number of spectra frequensies (max 128) 64
JONSWAP spectra coefficients γ= 3.300 σ1= 0.070 σ2= 0.090
Pierson-Moskowitz
JONSWAP
Simulation of wave time series from wave spectrum
Time series simulated from spectrum at equal frequency intervals
Time series simulated from spectrum at equal spectra areas
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
T sec
H
If you mark the simulation of wave time series from spectrum, you must specify the kind of spectrum.
The spectral amplitude is computed from he program, to obtain the specified wave height Hs
Usual coefficients for JONSWAP spectrum are gamma=3.30, sigma1=0.07, sigma2=0.09
If you mark to supply the wave spectrum values, enter bellow the pairs T, H for the wave spectrum.
The spectra amplitudes H correspond to the two sided spectrum, and they are
wave amplitude squared versus frequency in Hz.
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

cgWindwaves A program for Forecasting of wind generated waves

## *Computations*

Press **Run FLOAT** to run the main computation modulus.
The output file is created in the directory of the data file and has the ending FileName_OUT.TXT.
With the buttons [Output to NotPad] and [Output to Word] you can preview the output file from the NotPad or the Word.

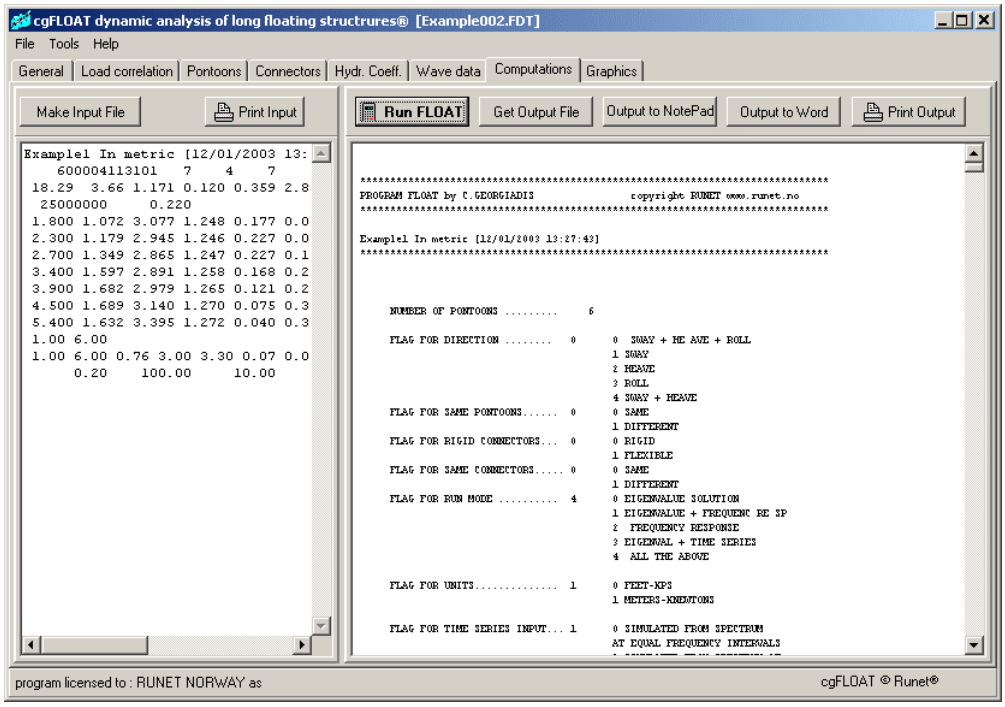
cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Make Input File
Print Input
Run FLOAT
Get Output File
Output to NotePad
Output to Word
Print Output
program licensed to : RUNET NORWAY as
cgFLOAT © Runet®

## *Graphic results*

These graphic results can be preview or printed:
Mode shapes - Frequency response - Time domain Response - Response to harmonic wave
Responce time series - Wave data

cgFLOAT dynamic analysis of long floating structrures® [Example002.FDT]
File Tools Help Update
General Load correlation Pontoons Connectors Hydr. Coeff. Wave data Computations Graphics
Get Graphics Data
Show Graphs
Graphic contents
Preview Graphs
PrintGraphs
Export to PDF
Export to Word
Mode Shapes Frequency response Time Domain Response Response to harmonic wave Response time series Wave data
SWAY frequency domain analysis
HEAVE frequency domain analysis
ROLL frequency domain analysis
DISPLACEMENTS ( M ) 0.8845E+00
DISPLACEMENTS ( M ) 0.1200E+01
ROTATIONS (RAD) 0.3063E+00
BENDING MOMENTS ( KN*M ) 0.3051E+04
BENDING MOMENTS ( KN*M ) 0.2007E+04
TORSIONAL MOMENTS ( KN*M ) 0.3707E+0
SHEAR FORCE ( KN ) 0.1051E+03
SHEAR FORCE ( KN ) 0.9932E+02
program licensed to : RUNET Norway as
cgFLOAT © Runet®

# 4. Structural Model

The program computes the response of straight floating bridges and breakwaters. In such cases neglecting the small coupling between sway and roll due to hydrodynamic mass and damping, the response can be considered uncoupled for the three directions of motion; sway, heave, roll. A future extension of the program will be for the case of curved bridges, where the response is three-dimensional.

Finite beam elements of half pontoon length, and linear elastic springs for the lateral anchoring are used in the structural modeling. A consistent mass and bouyancy matrix is used, based on a third degree polynomial element displacement field Ref. [5], [24]. The structural idealization as well as the stiffness and mass matrices are shown in Figures 2.1 a, b.
In the same figures are shown the stiffness matrices for flexible connectors (if any exist between the pontoons), based on a constant curvature displacement field due to their smaller length.

Elastic springs for the lateral anchoring can be specified at the ends and middle of each pontoon. The nodal point spacing can be chosen closer than half pontoon length by specifying pontoons shorter than the actual ones. In the later case and in case of a structure with connectors, very stiff connectors should be specified to simulate the rigid connections between the shorter pontoons (see Fig 2.2).

Assembling the structure stiffness and mass matrices and condensing the rotational degrees of freedom, the equations of motion are:

$$[m]\{\ddot{r}(t)\} + [c]\{\dot{r}(t)\} + [k]\{r(t)\} = \{R(t)\} \qquad (2.1)$$

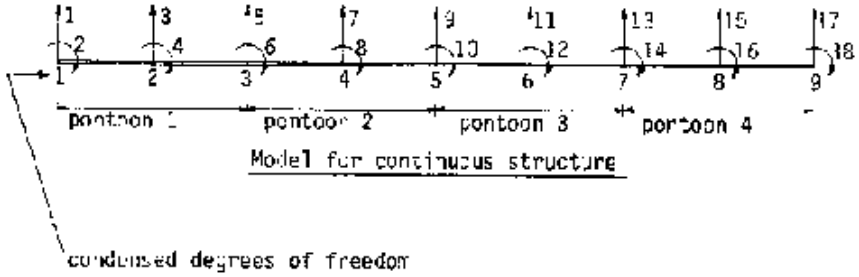


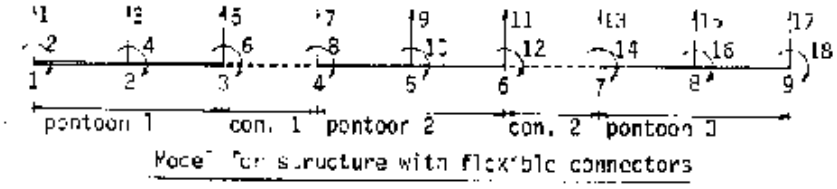


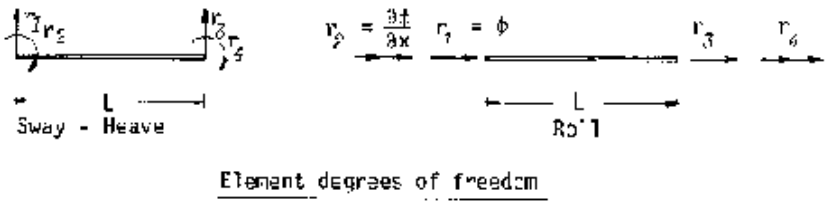

$$[K_B^p] = \frac{E_p I_p}{L^3}\begin{bmatrix} 12 & -6L & -12 & -6L \\ -6L & 4L^2 & 6L & 2L^2 \\ -12 & 6L & 12 & 6L \\ -6L & 2L^2 & 6L & 4L^2 \end{bmatrix} \qquad [K_T^p] = \frac{G_p J_p}{30L}\begin{bmatrix} 36 & -3L & -36 & -3L \\ -3L & 4L^2 & 3L & -L^2 \\ -36 & 3L & 36 & 3L \\ -3L & -L^2 & 3L & 4L^2 \end{bmatrix}$$

Bending stiffness for pontoons

Torsional stiffness for pontoons

$$[K_W^p] = \frac{sL}{420}\begin{bmatrix} 156 & -22L & 54 & 13L \\ -22L & 4L^2 & -13L & -3L^2 \\ 13L & -3L^2 & 22L & 4L^2 \end{bmatrix} \qquad [M^p] = \beta\frac{mL}{420}\begin{bmatrix} 156 & -22L & 54 & 13L \\ -22L & 4L^2 & -13L & -3L^2 \\ 54 & -13L & 156 & 22L \\ 13L & -3L^2 & 22L & 4L^2 \end{bmatrix}$$

Buoyancy stiffness

s = wb Heave

$s = wb^3/12$ Roll

w : water specific weight

b : cross-section width

Mass matrix

$$\beta = \left(\frac{hydr. + struct.mass}{struck.mass}\right)$$

$$m = \iint_{A_c} \rho\, g\, dA \text{ (Heave, Sway)}; \quad m = \iint_{A_c} \rho\, gr^2\, dA \text{ (Roll)}$$

$$[K_T^e] = \begin{bmatrix} \frac{G_c J_c}{L_c} & 0 & \frac{-G_c J_c}{L_c} & 0 \\ \frac{-G_c J_c}{L_c} & 0 & \frac{G_c J_c}{L_c} & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \qquad [K_B^e] = \begin{bmatrix} \frac{G_c A_c}{L_c} & 0 & \frac{-G_c A_c}{L_c} & 0 \\ 0 & \frac{E_c I_c}{L_c} & 0 & \frac{-E_c I_c}{L_c} \\ \frac{-G_c A_c}{L_c} & 0 & \frac{G_c A_c}{L_c} & 0 \\ 0 & \frac{-E_c I_c}{L_c} & 0 & \frac{E_c I_c}{L_c} \end{bmatrix}$$

Torsional stiffness connectors

Bending stiffness connectors

**Stiffness and Mass Matrices**

where : [m], [c] virtual mass and damping matrices (structure + Hydrodynamic).
[ k ] structure stiffness + buoyancy matrix
{R(t)} exciting wave forces
{r(t)} nodal displacements
The above equation is solved in frequency and time domain as discussed in paragraphs 6 and 7 below.

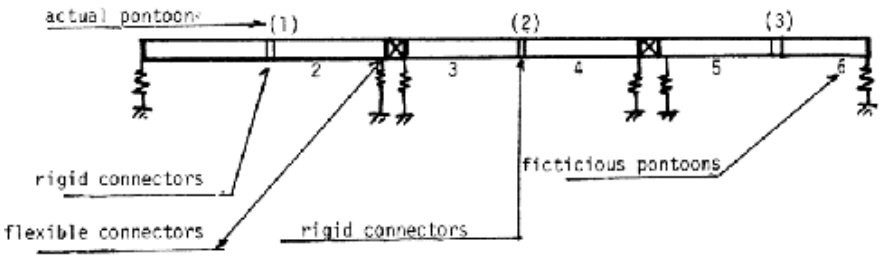


# 5. Hydrodynamic Coefficients

The hydrodynamic forces in the oscillating structure are: added mass (proportional to the structure acceleration), added damping (proportional to the structure velocity), and exciting force (proportional to the incident wave). The way these forces are computed is described in Ref. 6, and Ref.33. Here are presented in summary some results in tables and graphs for practical use obtained using program HYDRO. Detailed description of the theory behind this program and its use can be found in the above references.

In the graphs and tables following are presented the coefficients:

$\beta_1, \beta_2, \beta_3$ for the **Hydrodynamic mass**.
$\xi_1, \xi_2, \xi_3$ for the **Hydrodynamic damping**
$\delta_1, \delta_2, \delta_3$ for the **Hydrodynamic exciting forces**.

(where subscripts 1, 2, 3 are used for the three directions of motion: sway, heave, roll).
Using the above coefficients we can get (per unit length of structure):

**Added Mass:**

sway $M_s = \beta_1(\rho_w A)$ (3.1.a)
heave $M_H = \beta_2(\rho_w A)$ (3.1.b)
roll $M_R = \beta_3\left\{\rho_w (B/2)^4 + c^2\beta_1(\rho_w A)\right\}$ (3.1.c)

**Added Damping:**

The above coefficient represent percent of critical damping in respect to the virtual mass.

**Exciting Forces:**

sway $F_{sway} = \delta_1(\rho_w g)(B/2)(n(\tau)) = C_F^S n(t)$ (3.2.a)
heave $F_{heave} = \delta_2(\rho_w g)(B/2)(n(\tau)) = C_F^H n(t)$ (3.2.b)
roll $F_{roll} = \delta_3(\rho_w g)(B/2)^2(n(\tau)) + c^* F_{sway} = C_F^R n(t) + c^* F_{sway}$ (3.2.c)

To take into account the directional wave spectrum the coefficients (delta) have been modified, (Table 3.2)

All, the above coefficients are frequency dependent and in the graphs the normalized frequency has been used

σ Normalized frequency $\sigma = \omega\sqrt{B/2g}$

Hydrodynamic Mass (rectangular section B/T = 4, 6, 8)
Hydrodynamic Damp (rectangular cross section B/T = 4, 6, 8)
Hydrodynamic Force for Wave Direction (rectangular cross section B/T = 4, 6, 8)
Hydrodynamic Exiting Force for Different Wave directions (rectangular cross section B/T = 4)
Hydrodynamic Exiting Force for Different Wave directions (rectangular cross section B/T = 6)
Hydrodynamic Exiting Force for Different Wave directions (rectangular cross section B/T = 8)
Table 3.1 Hydrodynamic Coefficients, Tabulated Results of Figures 3.1, 3.2, 3.3

## *Hydrodynamic Mass*

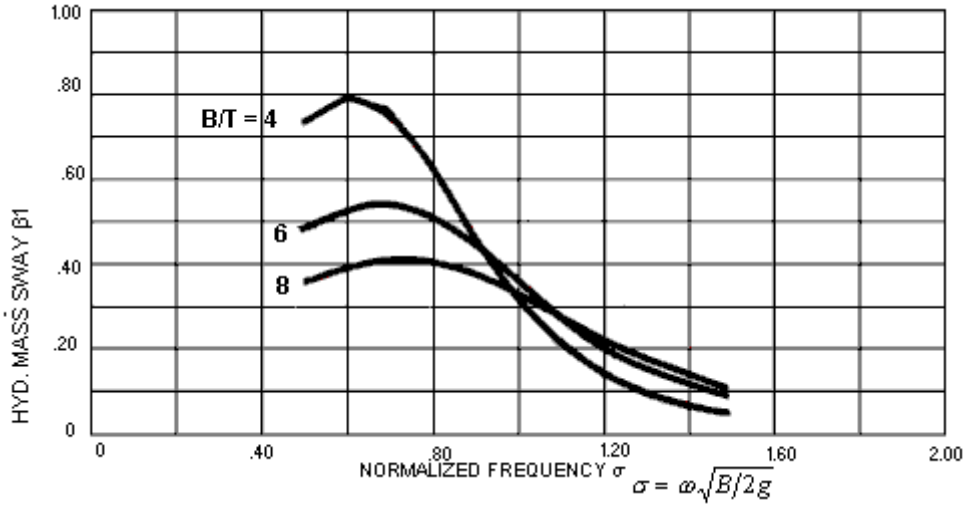


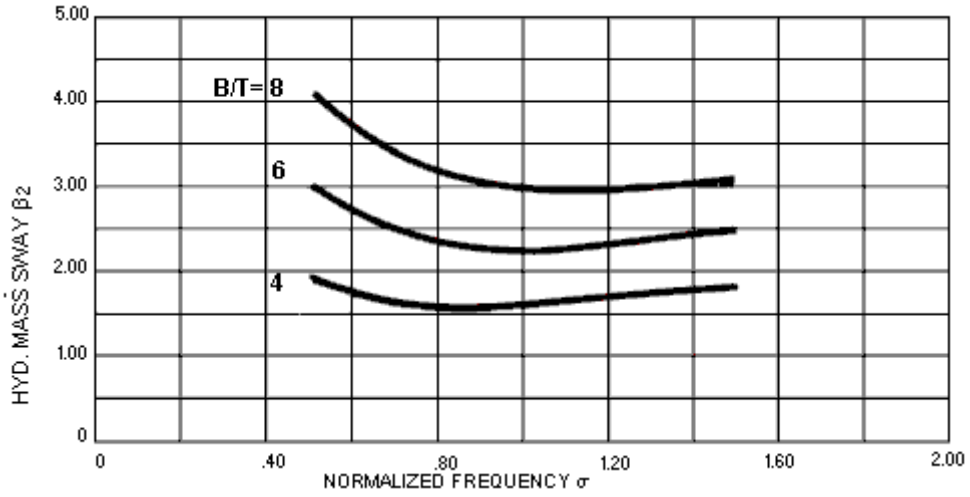


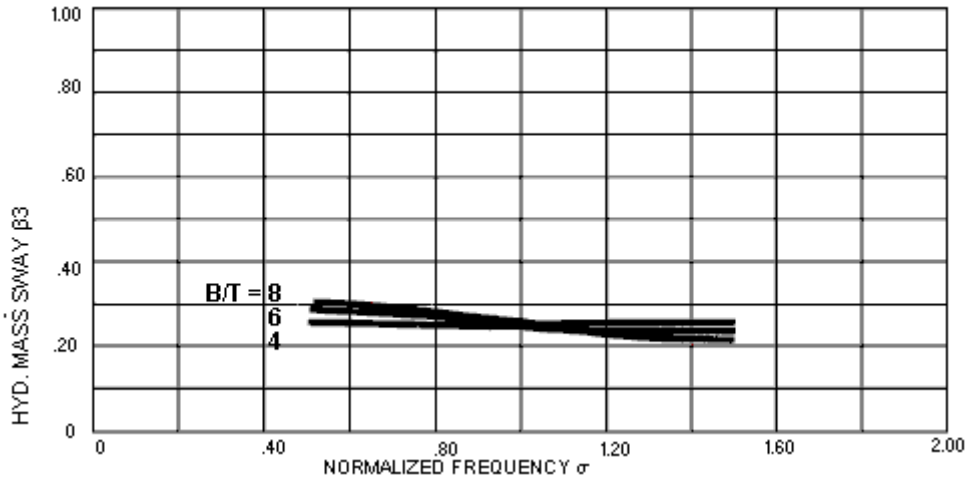

## *Hydrodynamic Damping*

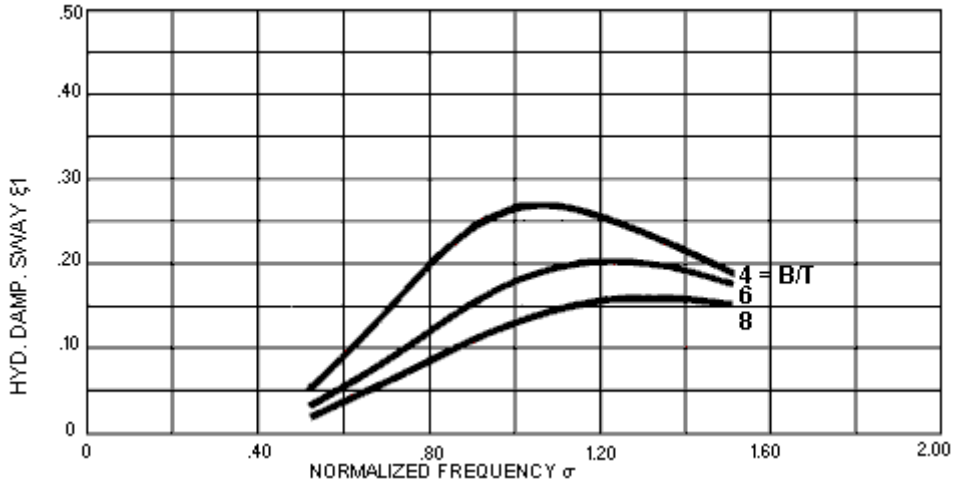


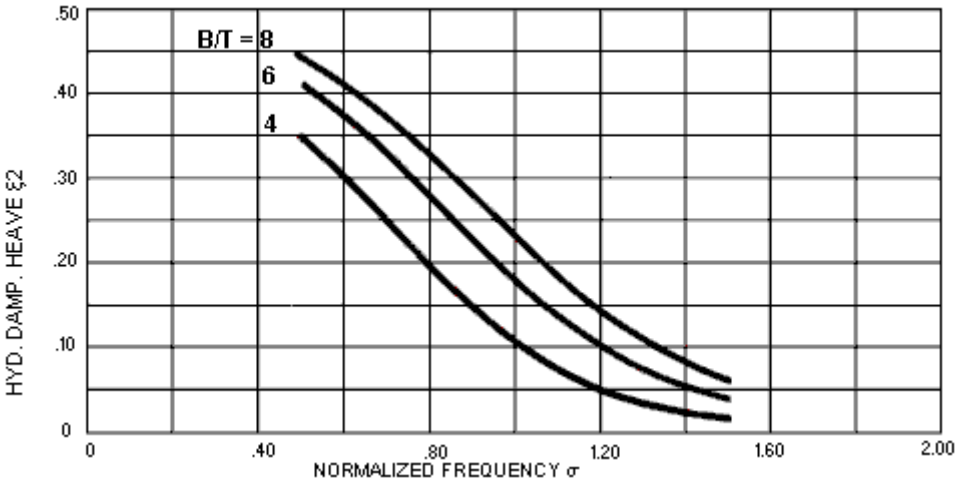


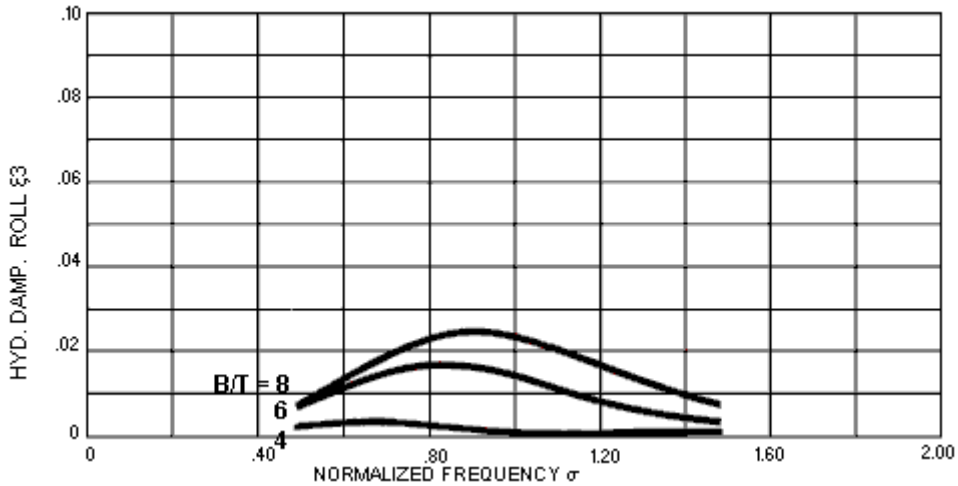

## *Hydrodynamic Exiting Force 4*

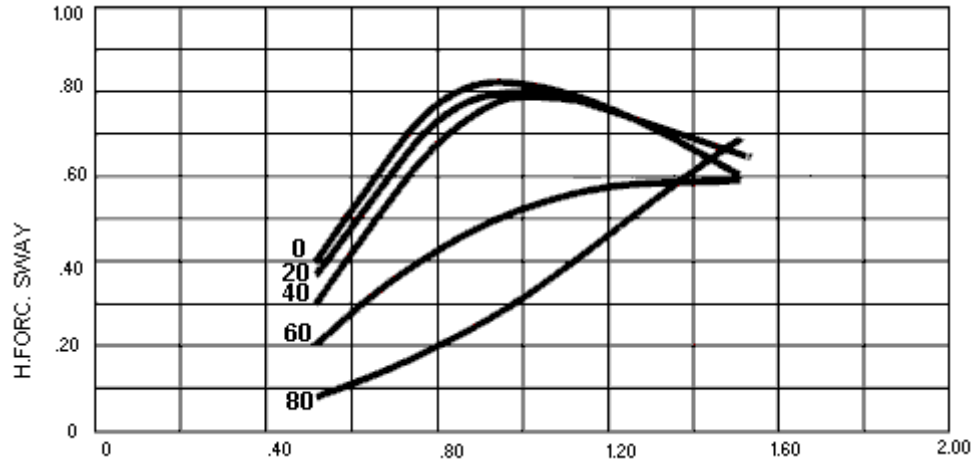


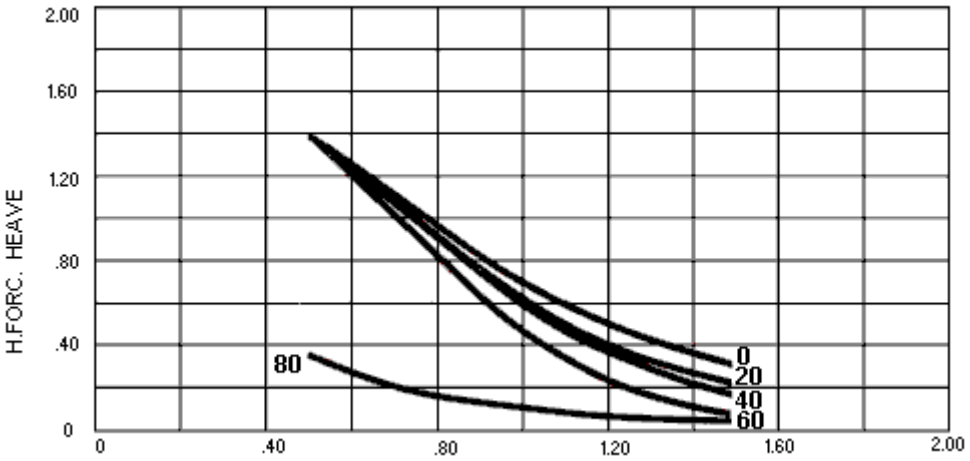


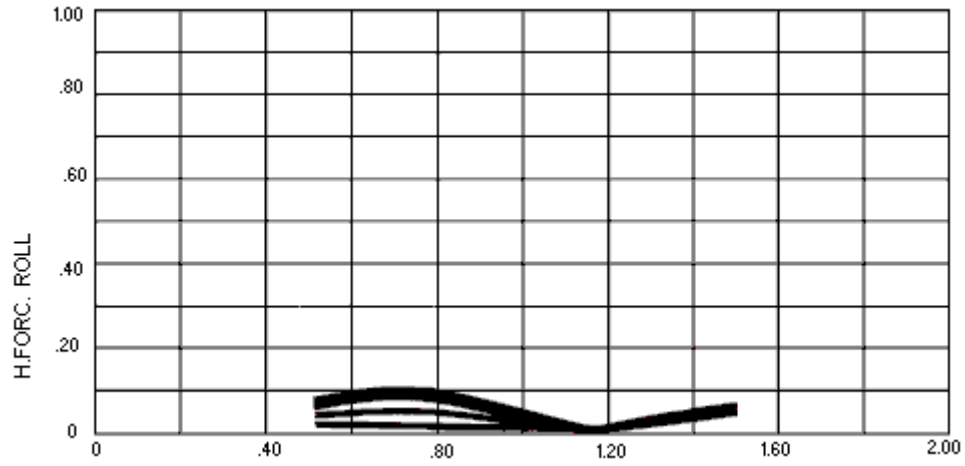

## *Hydrodynamic Exiting Force 6*

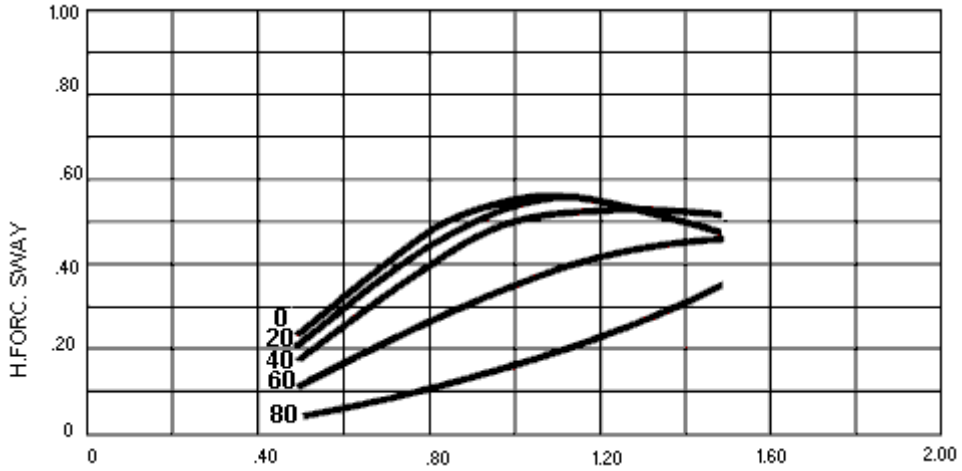


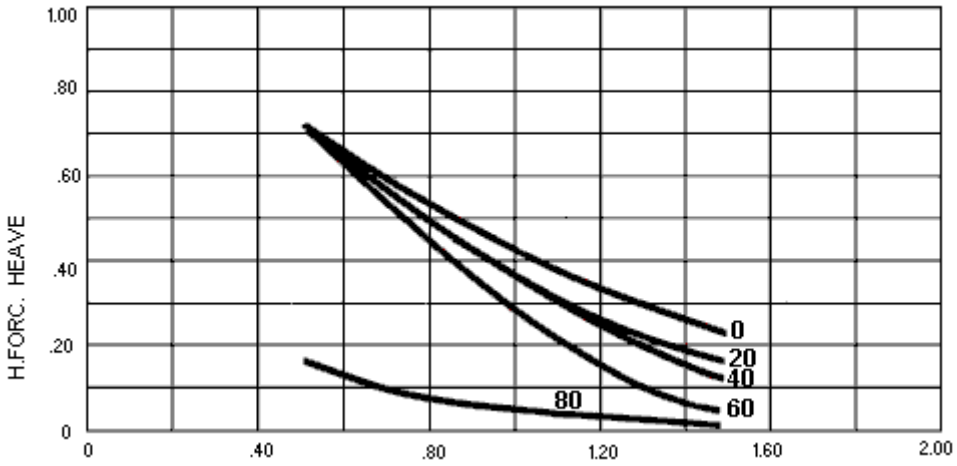


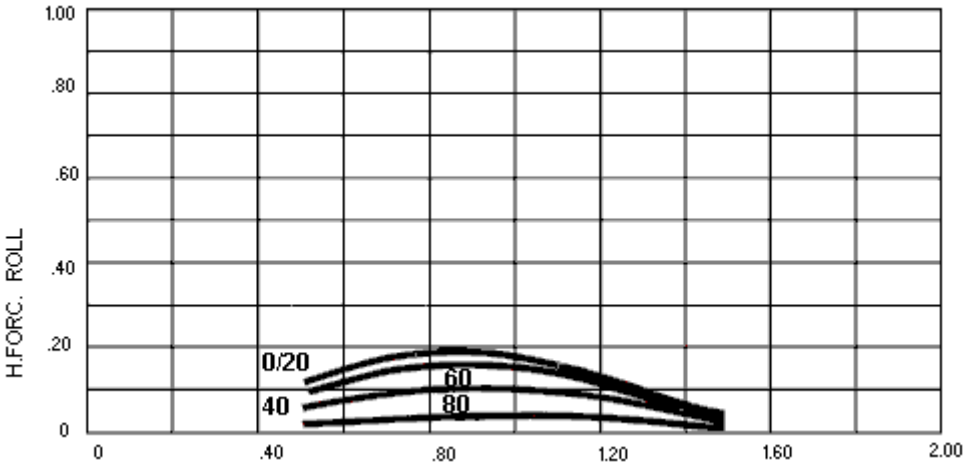

## *Hydrodynamic Exiting Force 8*

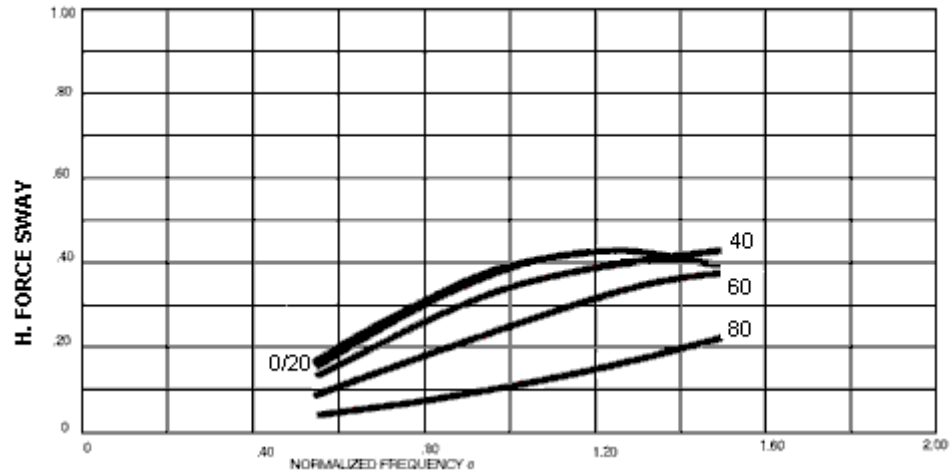


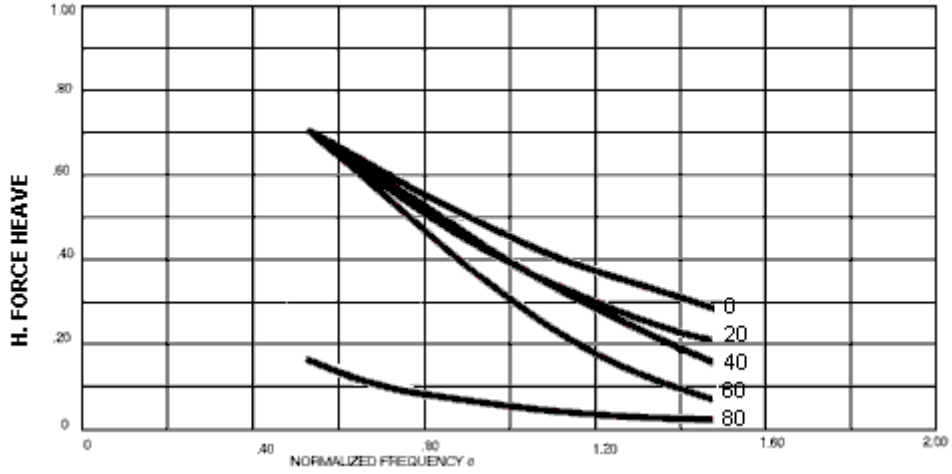


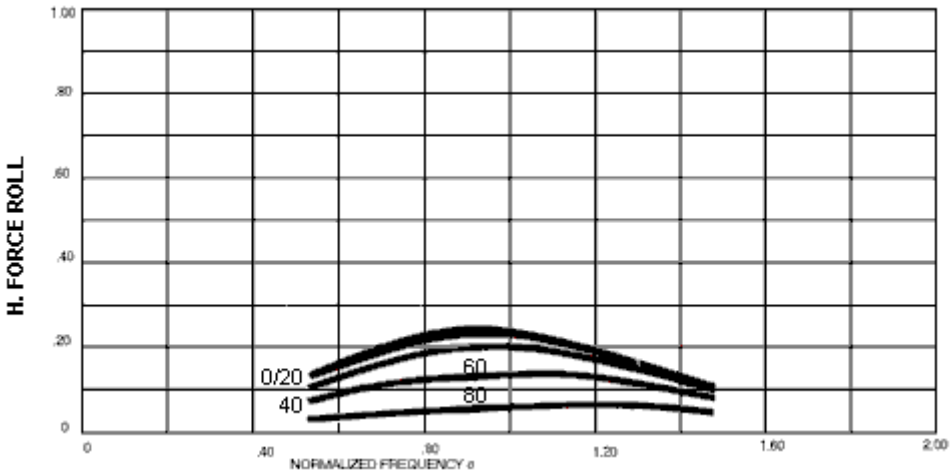

## *Hydrodynamic Force*

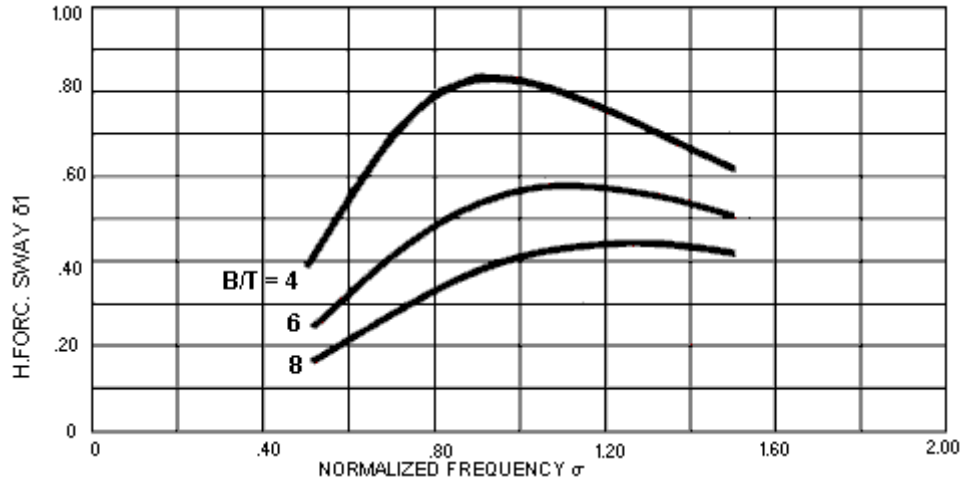


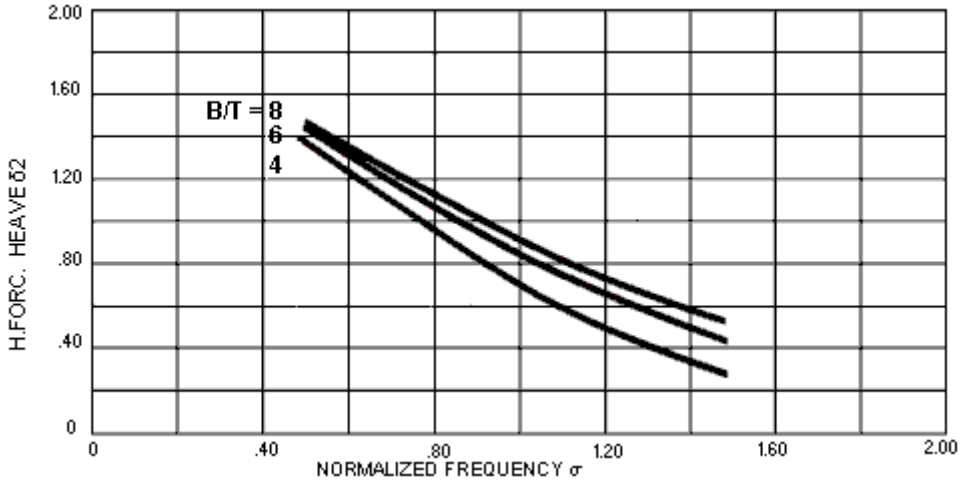


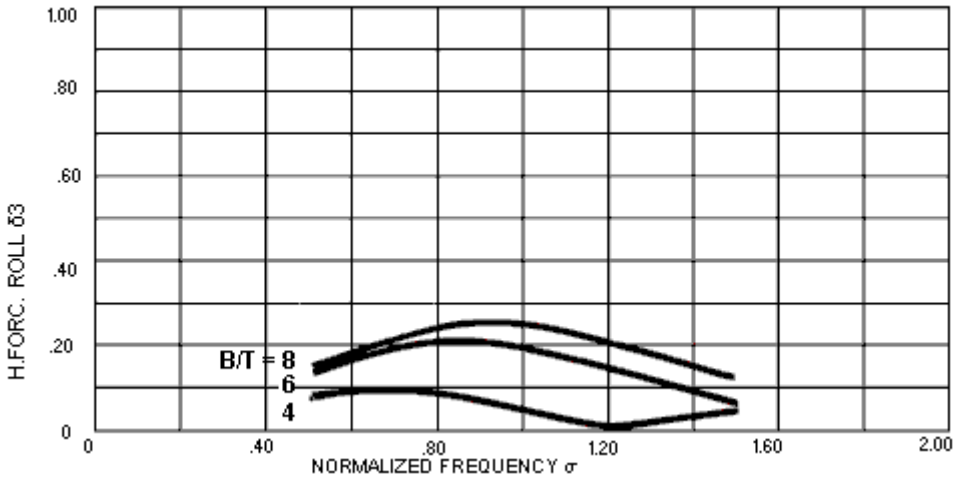

## *Table 3.1*

| $\sigma = \omega\sqrt{B/2g}$ | | MASS | | | DAMPING | | | FORCE | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL |
| B/T=4 | .50 | .742 | 1.923 | .261 | .049 | .353 | .002 | .391 | 1.410 | .076 |
| | .60 | .806 | 1.722 | .258 | .092 | .307 | .003 | .554 | 1.270 | .092 |
| | .70 | .778 | 1.604 | .255 | .148 | .254 | .003 | .701 | 1.130 | .096 |
| | .80 | .650 | 1.551 | .252 | .204 | .199 | .003 | .796 | .990 | .087 |
| | .90 | .482 | 1.546 | .251 | .245 | .149 | .001 | .832 | .854 | .068 |
| | 1.00 | .334 | 1.575 | .251 | .264 | .107 | .001 | .824 | .727 | .045 |
| | 1.10 | .225 | 1.621 | .253 | .264 | .074 | .000 | .794 | .614 | .022 |
| | 1.20 | .152 | 1.672 | .254 | .251 | .051 | .000 | .754 | .516 | .002 |
| | 1.30 | .104 | 1.720 | .255 | .230 | .034 | .000 | .708 | .433 | .017 |
| | 1.40 | .075 | 1.758 | .255 | .207 | .024 | .000 | .661 | .360 | .031 |
| | 1.50 | .057 | 1.784 | .255 | .184 | .017 | .001 | .615 | .291 | .042 |
| B/T=6 | .50 | .491 | 2.996 | .287 | .029 | .414 | .006 | .226 | 1.459 | .125 |
| | .60 | .541 | 2.672 | .285 | .053 | .377 | .010 | .319 | 1.337 | .164 |
| | .70 | .559 | 2.457 | .278 | .086 | .332 | .014 | .411 | 1.216 | .193 |
| | .80 | .529 | 2.323 | .265 | .123 | .281 | .016 | .487 | 1.097 | .207 |
| | .90 | .458 | 2.253 | .252 | .156 | .229 | .016 | .538 | .979 | .204 |
| | 1.00 | .369 | 2.234 | .243 | .180 | .180 | .014 | .563 | .866 | .189 |
| | 1.10 | .284 | 2.252 | .237 | .193 | .137 | .011 | .569 | .761 | .166 |
| | 1.20 | .213 | 2.293 | .235 | .196 | .101 | .008 | .562 | .667 | .138 |
| | 1.30 | .159 | 2.346 | .235 | .191 | .073 | .005 | .546 | .585 | .110 |
| | 1.40 | .119 | 2.400 | .237 | .181 | .053 | .003 | .523 | .511 | .083 |
| | 1.50 | .090 | 2.450 | .239 | .169 | .038 | .002 | .497 | .437 | .061 |
| B/T=8 | .50 | .369 | 4.083 | .303 | .020 | .447 | .007 | .157 | 1.484 | .138 |
| | .60 | .408 | 3.642 | .304 | .037 | .417 | .013 | .220 | 1.370 | .182 |
| | .70 | .429 | 3.338 | .298 | .060 | .377 | .018 | .284 | 1.260 | .219 |
| | .80 | .424 | 3.134 | .284 | .086 | .331 | .023 | .341 | 1.152 | .244 |
| | .90 | .392 | 3.005 | .267 | .111 | .281 | .025 | .385 | 1.046 | .252 |
| | 1.00 | .342 | 2.937 | .251 | .132 | .232 | .024 | .414 | .942 | .247 |
| | 1.10 | .285 | 2.917 | .239 | .147 | .186 | .021 | .431 | .845 | .230 |
| | 1.20 | .230 | 2.933 | .232 | .155 | .145 | .017 | .437 | .756 | .206 |
| | 1.30 | .183 | 2.972 | .228 | .157 | .111 | .013 | .436 | .677 | .177 |
| | 1.40 | .145 | 3.025 | .227 | .154 | .083 | .010 | .428 | .605 | .148 |
| | 1.50 | .114 | 3.081 | .228 | .148 | .062 | .007 | .413 | .533 | .122 |

## *Table 3.2*

| σ | | H.FORC. THETA=0 | | | H.FORC. THETA= 20 | | | H.FORC. THETA= 40 | | | H. FORC. THETA =60 | | | H.FORC THETA=80 | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL | SWAY | HEAVE | ROLL |
| B/T=4 | .50 | .375 | 1.394 | .076 | .352 | 1.383 | .071 | .293 | 1.375 | .059 | .191 | 1.393 | .038 | .067 | .346 | .013 |
| | .60 | .527 | 1.244 | .092 | .495 | 1.222 | .086 | .424 | 1.210 | .072 | .273 | 1.203 | .046 | .100 | .256 | .017 |
| | .70 | .668 | 1.096 | .097 | .629 | 1.059 | .091 | .563 | 1.049 | .078 | .355 | 1.006 | .049 | .140 | .196 | .018 |
| | .80 | .767 | .954 | .089 | .726 | .897 | .083 | .684 | .896 | .074 | .425 | .813 | .045 | .188 | .152 | .018 |
| | .90 | .814 | .821 | .071 | .777 | .742 | .066 | .761 | .751 | .058 | .477 | .633 | .034 | .246 | .120 | .015 |
| | 1.00 | .817 | .701 | .048 | .791 | .601 | .044 | .786 | .614 | .036 | .513 | .473 | .021 | .311 | .095 | .008 |
| | 1.10 | .792 | .600 | .024 | .779 | .482 | .021 | .771 | .488 | .014 | .540 | .339 | .006 | .383 | .075 | .002 |
| | 1.20 | .749 | .516 | .002 | .748 | .389 | .001 | .736 | .379 | .008 | .560 | .233 | .011 | .460 | .060 | .016 |
| | 1.30 | .697 | .445 | .017 | .703 | .319 | .020 | .697 | .289 | .025 | .572 | .155 | .026 | .538 | .047 | .032 |
| | 1.40 | .640 | .379 | .032 | .645 | .264 | .034 | .663 | .216 | .040 | .577 | .100 | .040 | .610 | .036 | .049 |
| | 1.50 | .586 | .312 | .041 | .577 | .215 | .044 | .636 | .160 | .052 | .573 | .064 | .051 | .671 | .027 | .066 |
| B/T=6 | .50 | .220 | 1.445 | .124 | .207 | 1.433 | .117 | .171 | 1.421 | .096 | .112 | 1.443 | .063 | .039 | .334 | .022 |
| | .60 | .309 | 1.312 | .162 | .291 | 1.289 | .152 | .244 | 1.268 | .126 | .159 | 1.266 | .082 | .057 | .246 | .029 |
| | .70 | .397 | 1.183 | .190 | .374 | 1.144 | .179 | .322 | 1.121 | .152 | .210 | 1.082 | .098 | .077 | .187 | .036 |
| | .80 | .471 | 1.060 | .205 | .447 | .999 | .194 | .398 | .982 | .168 | .259 | .900 | .108 | .101 | .144 | .041 |
| | .90 | .524 | .944 | .205 | .502 | .858 | .194 | .460 | .851 | .172 | .305 | .728 | .111 | .128 | .113 | .045 |
| | 1.00 | .553 | .839 | .190 | .537 | .726 | .182 | .503 | .729 | .163 | .346 | .570 | .108 | .158 | .089 | .046 |
| | 1.10 | .562 | .746 | .166 | .554 | .609 | .160 | .525 | .613 | .144 | .382 | .431 | .099 | .190 | .070 | .046 |
| | 1.20 | .553 | .668 | .137 | .554 | .514 | .133 | .531 | .505 | .120 | .412 | .315 | .086 | .227 | .055 | .043 |
| | 1.30 | .533 | .600 | .106 | .539 | .439 | .103 | .528 | .406 | .094 | .436 | .221 | .070 | .266 | .044 | .037 |
| | 1.40 | .504 | .535 | .077 | .509 | .380 | .074 | .523 | .320 | .069 | .452 | .150 | .053 | .309 | .034 | .030 |
| | 1.50 | .472 | .463 | .055 | .467 | .325 | .048 | .517 | .247 | .046 | .459 | .100 | .036 | .352 | .027 | .021 |
| B/T=8 | .50 | .154 | 1.470 | .137 | .145 | 1.458 | .129 | .119 | 1.444 | .106 | .078 | 1.466 | .069 | .027 | .328 | .024 |
| | .60 | .215 | 1.347 | .181 | .230 | 1.323 | .170 | .169 | 1.297 | .141 | .111 | 1.297 | .092 | .039 | .240 | .032 |
| | .70 | .277 | 1.228 | .217 | .262 | 1.188 | .205 | .222 | 1.156 | .172 | .146 | 1.118 | .112 | .053 | .181 | .040 |
| | .80 | .333 | 1.115 | .242 | 0316 | 1.052 | .229 | .274 | 1.022 | .194 | .182 | .942 | .128 | .068 | .139 | .047 |
| | .90 | .377 | 1.010 | .251 | .362 | .920 | .239 | .319 | .899 | .206 | .218 | .774 | .138 | .084 | .109 | .052 |
| | 1.00 | .407 | .915 | .246 | .396 | .795 | .236 | .356 | .784 | .206 | .252 | .619 | .141 | .101 | .086 | .056 |
| | 1.10 | .424 | .831 | .228 | .419 | .683 | .222 | .381 | .677 | .195 | .286 | .482 | .139 | .120 | .068 | .056 |
| | 1.20 | .428 | .759 | .202 | .430 | .590 | .199 | .399 | .574 | .176 | .316 | .363 | .132 | .141 | .053 | .056 |
| | 1.30 | .422 | .696 | .170 | .428 | .516 | .169 | .410 | .478 | .153 | .343 | .0264 | .120 | .163 | .042 | .053 |
| | 1.40 | .409 | .633 | .138 | .414 | .456 | .135 | .420 | .389 | .129 | .364 | .186 | .105 | .188 | .032 | .050 |
| | 1.50 | .390 | .563 | .112 | .388 | .401 | .103 | .428 | .310 | .105 | .377 | .128 | .087 | .214 | .025 | .045 |

# 6. Spatial Correlation of Nodal Loads

To deal with the short-crested waves, two methods have been implemented in the program to take into account the spatial correlation of the wave loading.
The first is the S.C.F. method which consists of weighting the nodal loads by a factor to take into account the fact that the wave pressure is not fully correlated between nodal points. The nodes are assumed to be far enough so that the nodal loads are uncorrelated. (Measurements in Hood Canal and Evergreen floating bridges show that after a distance 0.6λ the wave forces can be considered uncorrelated, Ref. 9, 18, 20.)
The S.C.F. factor was developed empirically from measurements on the Hood Canal floating bridge and more about it can be found in Ref. 13.
In fig. 4.1 is shown the variation of S.C.F. with the ratio of nodal distance to wave length. The two curves shown on this figure correspond to linear, curve 1, or quadratic, curve 2, decrease of in-phase loadings from 0 to 0.6λ(lamda).

$$c = \frac{0.6}{d/\lambda}\left(1 - \frac{0.2}{d/\lambda}\right) \qquad (4.1)$$

$$c = \frac{0.8}{d/\lambda}\left(1 - \frac{0.225}{d/\lambda}\right) \qquad (4.2)$$

for $\frac{d}{\lambda} \geq 0.5$

Figure 4.1
Spatial Correlation Factor vs. ratio of nodal distance to wave length

The second method is described in Ref. 6 and consists in a theoretically developed wave correlation. Briefly it is as follows:
The wave coherence along the bridge is assumed to vary exponentially and for two points at distance Δz assumed to be of the form:

$$\gamma_w(\Delta z/\lambda) = \exp\left(-a(\Delta z/\lambda)^{\beta}\right) \qquad (4.3)$$

The values of α and β (beta) depend on the wave directional spectrum. In Fig. 4.2 are shown curves of the form y=exp(-axβ), and in Fig. 4.3 are shown curves for the wave coherence between two points at distance z on the bridge obtained for a directional spectrum of the form:

$$S(f,\theta) = S(f)\cos^{s}(\theta - \theta_0) \qquad (4.4)$$

Using least square fitting the values of α and β can be obtained by fitting curves of fig. 4.2 to those of fig. 4.3. (All these have been done using a small program COHER). Results for α and β values are shown in Table 4.1.
The nodal load cross-spectral densities can be written in the form:

$$S_{RiRj}(\omega) = \overline{\delta}(\omega)\rho_{ij}(\omega)S_w(\omega) \qquad (4.5)$$

where ρij (ω) depends on α, β and the nodal distances and can be easily computed using numerical integration (eight point Gauss quadrature method proved to be adequate).

Then the nodal loads are constructed from N series of uncorrelated loads,
Xi (t), i = 1,....N, as:

$$R_i(t) = \sum_{j=1}^{N} a_{ij} X_j(t) \qquad (4.6)$$

In order for the nodal loads to satisfy (4.5) the computation of aij is reduced to an eigenvalue problem and aij are obtained as:

$$[a_{ij}] = [Q]\cdot[\Lambda]^{1/2}[Q]^{T} \qquad (4.7)$$

where [Λ] is the eigenvalue matrix of [pij] in respect to a unit matrix and [Q] are the corresponding eigenvectors.

| | $\theta_o$ | 0° | 10° | 20° | 30° | 40° | 60° | 80° |
|---|---|---|---|---|---|---|---|---|
| n=2 | α | 4.47 | 1.70 | 1.42 | 1.14 | .90 | .53 | .32 |
| | β | 1.91 | 1.27 | 1.23 | 1.20 | 1.13 | 1.21 | 1.39 |
| n=4 | α | 4.44 | 2.36 | 1.49 | 1.15 | .87 | .44 | .20 |
| | β | 2.14 | 1.74 | 1.44 | 1.37 | 1.35 | 1.38 | 1.50 |
| n=6 | α | 3.09 | 2.33 | 1.68 | 1.08 | .82 | .38 | .14 |
| | β | 2.12 | 1.95 | 1.78 | 1.53 | 1.51 | 1.48 | 1.58 |
| n=8 | α | 2.33 | 2.09 | 1.61 | 1.10 | .75 | .34 | .11 |
| | β | 2.09 | 2.04 | 1.92 | 1.74 | 1.62 | 1.58 | 1.65 |
| n=10 | α | 1.87 | 1.77 | 1.44 | 1.05 | .70 | .31 | .08 |
| | β | 2.07 | 2.05 | 1.98 | 1.85 | 1.70 | 1.65 | 1.69 |
| n=12 | α | 1.57 | 1.52 | 1.28 | .97 | .64 | .28 | .07 |
| | β | 2.06 | 2.06 | 2.00 | 1.92 | 1.74 | 1.70 | 1.73 |

Table 4.1 results of Program COHER for α and β Coefficients Fitting Eq. 4.3 to Curves of Figure 4.3

# 7. Monte Carlo Simulation of Random Sea States

In a wave spectrum there are an infinite number of sea states, each one resulting in different loading in the structure.

To estimate the expected response values a Monte Carlo simulation is followed in this program.

For this the structure response is calculated for N sets of different nodal loads resulting from the same wave spectrum.

The mean and standard deviation between these sample response values are calculated and they approximate the expected response value and its standard deviation provided the sample number N is large enough.

To figure out an appropriate value for N, runs should be made with different N values and from the variation of the results the value of N can be judged. From experience a value for N between 8 and 16 seems adequate. As an example Fig. 5.1, 5.2, and 5.3 show results for N = 8, 16, 24. The small difference between the results for N = 16 and 24, shows that a value for N = 16 is adequate.

Ref.5 and Ref.29

# 8. Frequency Domain Analysis

First the response to short-crested harmonic waves of single frequency ω (omega) is calculated assuming the structure oscillates in a steady state with frequencyω. Again two methods are implemented corresponding to the two approaches of [4], above. To take into account the wave spatial correlation (para. 4), the nodal loads are computed as follows (Fig. 6.1.):

a)

$$R_i(t) = \left( \frac{c_{i-1} \cdot (\omega, L_{i-1}) \cdot L_{i-1} + c_i \cdot (\omega, L_i) \cdot L_i}{2} \right) \bar{\delta}(\omega) \cdot \eta(\omega) \cdot \sin(\omega t + \Phi_i) \qquad (6.1)$$

$c_i(\omega, L_i)$ is a spatial correlation factor, S.C.F..
$\bar{\delta}(\omega)$ is the hydrodynamic force coefficient, (Table 3.2.)
$\eta(\omega)$ is the wave amplitude.
$\Phi_i$ is a random phase angle.

This angle can be chosen with a uniform probability between 0 and Φ (phi). A value of Φ(phi) equal to π/2 produces less correlated loads than equal to 2π (pi) [6].

b)

$$R_i(t) = \bar{\delta}(\omega)\, \eta(\omega) \sum_{j=1}^{N} a_{ij} \sin(\omega t + \Phi_j) \qquad (6.2)$$

Here the nodal loads are constructed from N uncorrelated time series, as described in para. 4 and aij are obtained from Eq. (4.7) for the wave coherence function assumed to be of the form of Eq. (4.3).

The structure loaded as shown in Figure 6.2, and oscillating in a steady state will have displacements:

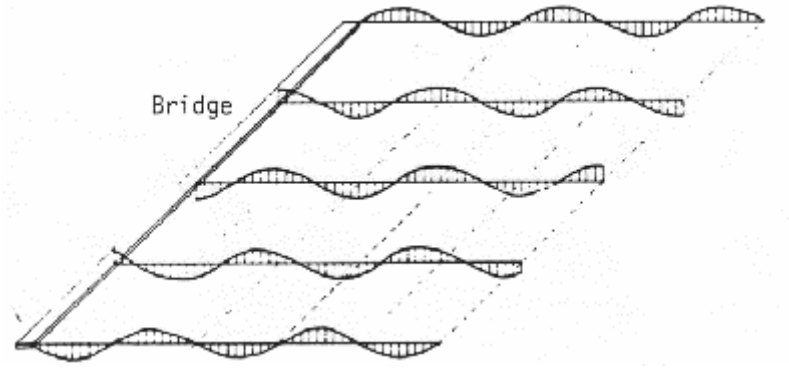


Figure 6.2 Nodal Harmonic Loads

$$r_i(t) = r_i \cdot \sin(\omega t + \psi_i) = r_i \cdot \sin\omega t \cdot \cos\psi_i + r_i \cdot \cos\omega t \cdot \sin\psi_i = \quad (6.3.a)$$
$$= a_i \cdot \sin\omega t + b_i \cdot \cos\omega t$$

and

$$\dot{r}_i(t) = a_i \cdot \omega \cdot \cos\omega t - b_i \cdot \omega \cdot \sin\omega t \quad (6.3.b)$$

$$\ddot{r}_i(t) = -a_i \cdot \omega^2 \cdot \sin\omega t - b_i \cdot \omega^2 \cdot \cos\omega t \quad (6.3.c)$$

$$\{r(t)\} = \{a\} \cdot \sin\omega t + \{b\} \cdot \cos\omega t \quad (6.4)$$

$$\{R(t)\} = \{A\} \cdot \sin\omega t + \{B\} \cdot \cos\omega t \quad (6.5)$$

where $\{a\} = \{a_i\}$, $\{b\} = \{b_i\}$, $\{A\} = \{A_i\}$, $\{B\} = \{B_i\}$
and,

$$A_i = \frac{1}{2}\{C_{i-1} \cdot (\omega, L_{i-1}) \cdot L_{i-1} + C_i \cdot (\omega, L_i) \cdot L_i\} \cdot \bar{\delta}(\omega) \cdot \eta(\omega) \cdot \cos\phi_i \quad (6.6.a)$$
$$B_i = \frac{1}{2}\{C_{i-1} \cdot (\omega, L_{i-1}) \cdot L_{i-1} + C_i \cdot (\omega, L_i) \cdot L_i\} \cdot \bar{\delta}(\omega) \cdot \eta(\omega) \cdot \sin\phi_i \quad (6.6.b)$$

or

$$A_i = \bar{\delta}(\omega) \cdot \eta(\omega) \cdot \sum_{j=1}^{N} a_{ij} \cdot \cos\phi_j \quad (6.7.a)$$
$$B_i = \bar{\delta}(\omega) \cdot \eta(\omega) \cdot \sum_{j=1}^{N} a_{ij} \cdot \sin\phi_j \quad (6.7.b)$$

in case of (6.2).

Writing the damping in the form :

$[c]=2\,\xi(\omega)\,\omega[m]$ (6.8)

relation (2.1) becomes:

$$\begin{bmatrix} [k] - \omega^2[m] & -2 \cdot \xi \cdot \omega^2 \cdot [m] \\ 2 \cdot \xi \cdot \omega^2[m] & [K] - \omega^2 \cdot [m] \end{bmatrix} \begin{Bmatrix} \{a\} \\ \{b\} \end{Bmatrix} = \begin{Bmatrix} \{A\} \\ \{B\} \end{Bmatrix} \quad (6.9)$$

Solving (6.9) the sin and cos terms, {a} and {b} for the displacements are obtained and consequently the bending moments and shearing forces. The corresponding maximum values are computed as:

$$\max r_i = \sqrt{a_i^2 + b_i^2} \qquad (6.10)$$

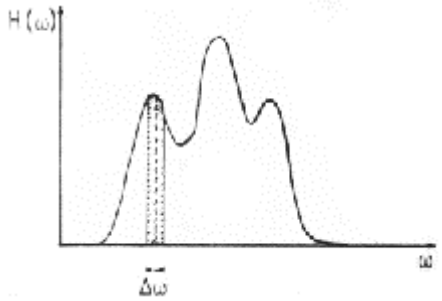


Figure 6.3.a Response to unit amplitude waves

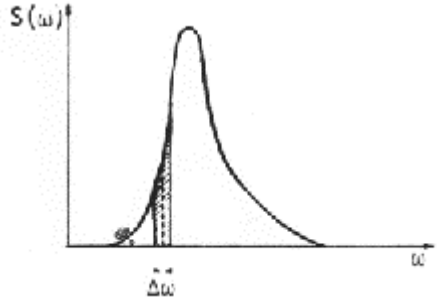


Figure 6.3.b. Wave Spectrum

The frequency response H(ω) (H/omega) to unit wave amplitude [η(ω) = 1] is evaluated for different wave periods and different sets of random phase angles. Maximum average values and standard deviations between the sets of random shifts are computed and the maximum values along the bridge are plotted for each wave period.

For the response due to a wave spectrum (Fig. 6.3.b), the wave field is constructed by the superposition of certain number of harmonics with amplitude the square root of the corresponding spectral area, and the structural response amplitude is computed as:

$$r = \int_0^{\infty} H(\omega) \cdot \eta(\omega) \cdot d\omega \qquad (6.11)$$

Again the response to a wave spectrum is computed for different sets of random phase angles for the wave harmonics, and maximum, average and standard deviations values are computed and plotted along the bridge length. The above procedure is as if we superimpose Figure (6.2) for different wave periods and amplitudes η(ω), with a result shown in Figure (6.4) in which the structure is loaded with different time series having the same energy spectrum and being either the uncorrelated case (6.1) or the appropriate correlated case (6.2).

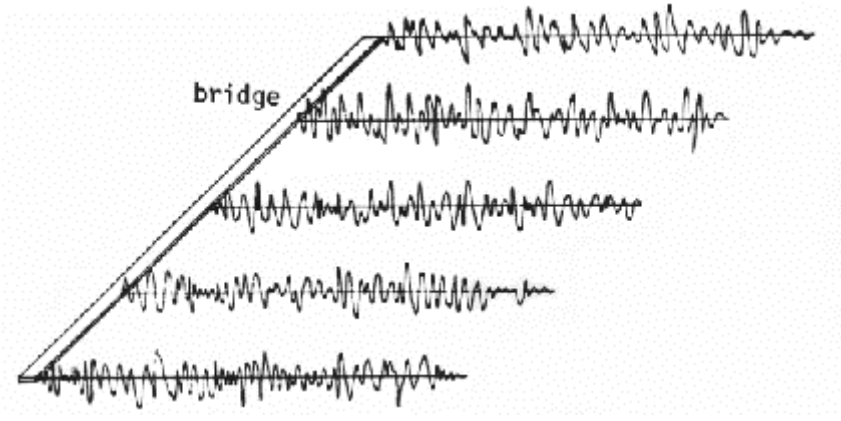


Figure 6.4 Nodal wave loading

# 9. Time Domain Analysis

The mode superposition method has been adopted for the time domain analysis, being a more economic solution as the higher mode shapes do not participate in the response. Constant hydrodynamic coefficients S.C.F. and load correlation matrix, are assumed as computed for the peak spectrum frequency. The generalized Jacobi's method [1] is used in the eigenvalue solution. The above method seems more appropriate due to the small number of eigenvalues and to the fact that the condensed stiffness and mass matrices, although not banded, are strongly diagonal which helps in the fast convergence of Jacobi's method.

The wave time series are inputted or constructed from the wave spectrum as described in [4], by superposition of harmonics:

$$w(t) = \sum_{i=1}^{M} n_i(\omega_i) \cdot \sin(\omega_i \cdot t + \psi_i) \qquad (7.1)$$

where : ψi are random angles from 0 to 2π and ωi , i = 1, 2 . . . . M are frequencies in which the wave energy spectrum is split, chosen either at equal spacing or at equal spectra areas between them

$$\eta(\omega) = \sqrt{S(\omega)\Delta\omega} \quad \text{(Fig 6.3.b)}$$

.

To construct different samples of time series the above time series ω(t) are shifted at random intervals. If the time series are constructed from the wave spectrum, for each set of random shifts the time series are reconstructed from (7.1) with different phase angles, ψ. For the corresponding cases of (6.1) and (6.2) the nodal loading is constructed
as:

$$\text{a)}\quad R_i(t) = \left\{c_{i-1} \cdot (\omega_0, L_{i-1}) \cdot L_{i-1} + c_i \cdot (\omega_0, L_i) \cdot L_i\right\} \cdot \bar{\delta}(\omega_0) \cdot w(t + T_i) \qquad (7.2)$$

$$\text{b)}\quad R_i(t) = \bar{\delta}(\omega_0) \cdot \sum_{j=1}^{N} a_{ij} \cdot w(t + t_j) \qquad (7.3)$$

$$\text{c)}\quad R_i(t) = \bar{\delta}(\omega_0) \cdot \sum_{j=1}^{i} a_{ij} \cdot w_j(t) \qquad (7.4)$$

where Tj is the shifting interval range between 0 and TSH, where TSH should be inputted and should be about two to four times the peak wave period.(delta) and Ci are described in para. 6 and correspond to the peak wave frequency. In the third case the time series wj(t) are constructed using linear filtering methods as is discussed in para. 4.

The decoupled equations of motion are integrated using Wilson's theta method [1], which is unconditionally stable for theta >=1.4.

To be able to manipulate the large amount of data in a small central memory, the time integration and all further manipulations are done by writing the time series in blocked form, the optimum size of which is computed by the program to minimize execution time and meet memory limits. Again maximum, average and standard deviations are computed between the sets of randomly shifted time series and plotted along the bridge length. Also, representative time series of the response from each set of randomly shifted series can be plotted for three bridge locations, left bridge end, left quarter span and middle of the bridge.

# 10. Boat Wake Response

For the response to boat wakes [Ref 32] the wave forces have been modeled as shown in Figure 8.1.

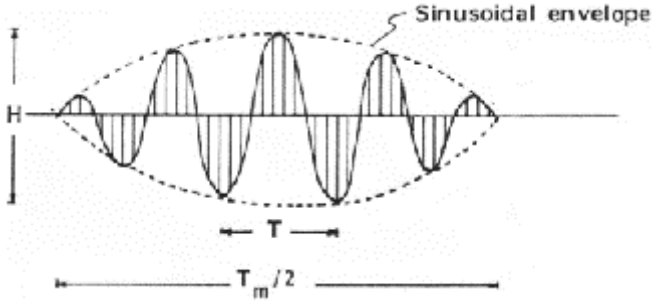


Figure 8.1 Boat wake (Tm/T =9)

$$n(t) = \frac{H}{2} \cdot \sin\left(2\pi \frac{t}{T_m}\right) \cdot \sin\left(2\pi \frac{t}{T}\right) \qquad (8.1)$$

From observed data it seems that a ratio Tm/T of 3 to 15 is appropriate.
The loading of the bridge at a time t (t = 0 when the wake is at the left end) is shown in Figure 8.2 and can be represented by the following relations:

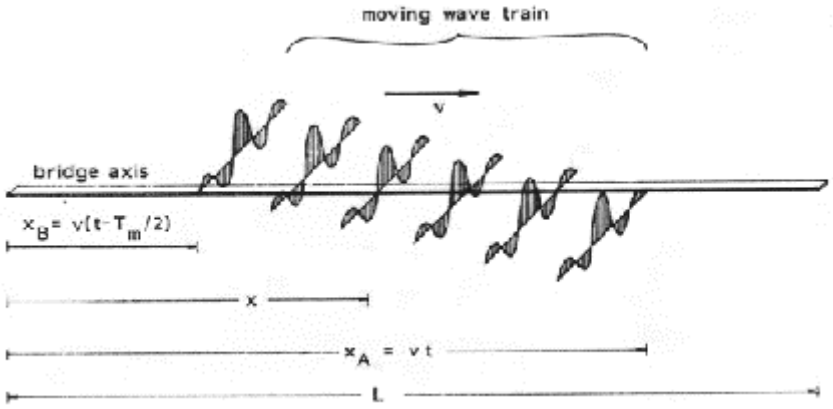


Figure 8.2. Boat wake loading

$$f(x) = \delta(\omega,\beta) \cdot \left(\frac{H}{2}\right) \cdot \sin\left(\frac{2\pi}{T_m} \cdot \frac{x_A - x}{V}\right) \cdot \sin\left(\frac{2\pi}{T} \cdot \frac{x_A - x}{V}\right) \quad \text{for } x_B \le x \le x_A \qquad (8.2)$$

$$f(x) = 0, \quad \text{for } x < x_B \text{ or } x > x_A \text{ and } x_A = Vt,\ x_B = V\left(t - \frac{T_m}{2}\right)$$

V is the boat speed parallel to the bridge. Assuming linear displacement field for the bridge (Fig. 8.3) we have for node i:

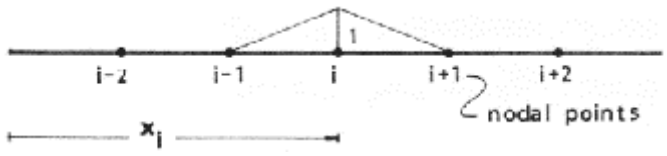

Figure 8.3. Linear displacement field for - node i .

$$N_i(x) = \frac{x - x_{i-1}}{x_i - x_{i-1}} \qquad x_{i-1} \le x \le x_i$$
$$N_i(x) = \frac{x_{i+1} - x}{x_{i+1} - x_i} \qquad x_i < x < x_{i+1} \qquad (8.3)$$
$$N_i(x) = 0 \qquad x < x_{i-1},\ x > x_{i+1}$$

Applying virtual work, the nodal loads are computed as:

$$R_i(x) = \int_0^L N_i(x) \cdot f(x) \qquad (L = \text{bridge length}) \qquad (8.4)$$

Relation ( 8.4 ) can be integrated explicitly for the nodal loads. Another way of computing the boat wake response is by loading the nodal points with a time delay ($\Delta t$) (deltat) between them, where:

$$\Delta t = \frac{\Delta \ell}{V} \qquad (\Delta \ell : \text{nodal distance}) \qquad (8.5)$$

The forces would be determined by multiplying ( 8.1 ) by $\delta(\omega,\theta)$ and by an appropriate "contribution length", which may or may not be the same as the nodal spacing.

The latter case of computing the nodal loads, can give erroneous results if the nodes are not closely spaced and the "contribution length" properly chosen. Results of boat wake response are shown in Figure 8.4 for a breakwater with flexible connectors.

# 11. Wave Coherence

The wave coherence along the bridge is assumed to vary exponentially and for two points at distance $\Delta z$ assumed to be of the form:

$$\gamma_w(\Delta z/\lambda) = \exp\left(-a(\Delta z/\lambda)^{\beta}\right) \qquad (4.3)$$

The values of $\alpha$ and $\beta$ depend on the wave directional spectrum. In Fig. 4.2 are shown curves of the form y=exp(-ax$\beta$), and in Fig. 4.3 are shown curves for the wave coherence between two points at distance z on the bridge obtained for a directional spectrum of the form:

$$S(f,\theta) = S(f)\cos^n(\theta - \theta_0) \qquad (4.4)$$

Using least square fitting the values of Table 4.1 for of a and $\beta$ are obtained.

| | $\theta_o$ | 0° | 10° | 20° | 30° | 40° | 60° | 80° |
|---|---|---|---|---|---|---|---|---|
| n=2 | α | 4.47 | 1.70 | 1.42 | 1.14 | .90 | .53 | .32 |
| | β | 1.91 | 1.27 | 1.23 | 1.20 | 1.13 | 1.21 | 1.39 |
| n=4 | α | 4.44 | 2.36 | 1.49 | 1.15 | .87 | .44 | .20 |
| | β | 2.14 | 1.74 | 1.44 | 1.37 | 1.35 | 1.38 | 1.50 |
| n=6 | α | 3.09 | 2.33 | 1.68 | 1.08 | .82 | .38 | .14 |
| | β | 2.12 | 1.95 | 1.78 | 1.53 | 1.51 | 1.48 | 1.58 |
| n=8 | α | 2.33 | 2.09 | 1.61 | 1.10 | .75 | .34 | .11 |
| | β | 2.09 | 2.04 | 1.92 | 1.74 | 1.62 | 1.58 | 1.65 |
| n=10 | α | 1.87 | 1.77 | 1.44 | 1.05 | .70 | .31 | .08 |
| | β | 2.07 | 2.05 | 1.98 | 1.85 | 1.70 | 1.65 | 1.69 |
| n=12 | α | 1.57 | 1.52 | 1.28 | .97 | .64 | .28 | .07 |
| | β | 2.06 | 2.06 | 2.00 | 1.92 | 1.74 | 1.70 | 1.73 |

Table 4.1 results of Program COHER for $\alpha$ and $\beta$ Coefficients Fitting Eq. 4.3 to Curves of Figure 4.3

# 12. Examples

## *Example 1 of Breakwater*

The response of a breakwater of length (8x 75' = 600') with rigid or flexible connectors will be modeled as an example.

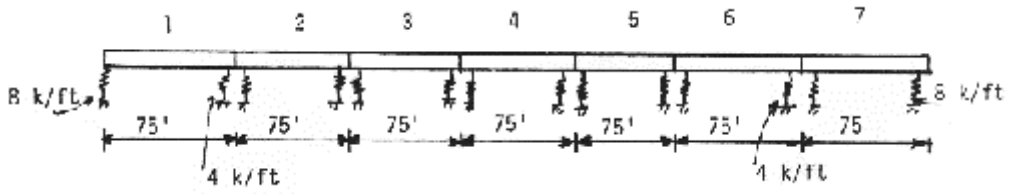


Figure 9.1

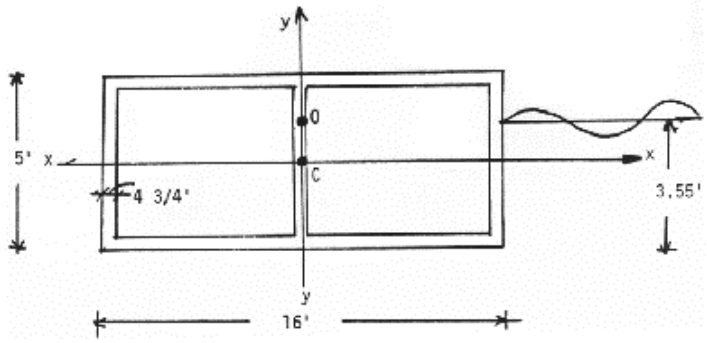


Figure 9.2

PONTOON PROPERTIES

Cross section area :

$$A_c = 16 \times 5 - (16 - 3 \times 0.396) \times (5 - 2 \times 0.396) =$$
$$= 17.67 \text{ ft}^2$$

Moments of inertia:

$$I_{xx} = \frac{16 \times 5^3}{12} - \frac{(16 - 3 \times 0.396) \times (5 - 2 \times 0.396)^3}{12} =$$
$$= 74.69 \text{ ft}^4$$

$$I_{yy} = \frac{5 \times 16^3}{12} - \frac{(5 - 2 \times 0.396) \times (16 - 2 \times 0.396)^3}{12} + \frac{(5 - 2 \times 0.396) \times 0.396^3}{12} =$$
$$= 473.27 \text{ ft}^4$$

$$I_0 = I_{xx} + I_{yy} = 74.69 + 473.27 = 547.96 \text{ ft}^4$$

$$J = \frac{4 \times (5 - 0.396)^2 (16 - 0.396)^2}{\frac{2 \times (16 - 0.396) + 2 \times (5 - 0.396)}{0.396}} = 202.28 \text{ ft}^4$$

Modulus of Elasticity $E = 417000 \text{ k/ft}^2$
Poisson Ratio $v = 0.22$

Mass:

$$m_x = m_y = \frac{3.55 \times 16 \times 0.064}{32.2} = 0.113 \text{ k slug/ft}$$

$$m_t = \frac{547.96}{17.67} \times 0.113 = 3.50 \text{ k slug ft}^2/\text{ft}$$

(mt is the mass inertia per unit length)

Hydrodynamic Coefficients for Example Breakwater

B/t = Width/draft = 16/3.55 =4.5

$\sigma$ = normalized frequency $= \omega\sqrt{B/2g} = \frac{2\pi}{t}\sqrt{16/2(32.2)} = 3.13/T$

$\rho g B/2$ = hydrodynamic force factor in translation = $0.064(16/2) = 0.512$

$\rho g (B/2)^2$ = hydrodynamic force factor in roll = $0.064(16/2)^2 = 4.096$

From Table 3.1 the mass and damping coefficients are found to be:

| T | | Mass | | | Damping | | |
|---|---|---|---|---|---|---|---|
| (sec) | σ | sway | heave | roll | sway | heave | roll |
| 2 | 1.56 | 1.052 | 2.87 | 1.25 | 0.167 | 0.017 | 0.001 |
| 3 | 1.04 | 1.30 | 2.76 | 1.25 | 0.24 | 0.111 | 0.004 |
| 4 | 0.78 | 1.64 | 2.76 | 1.26 | 0.17 | 0.23 | 0.006 |
| 5 | 0.63 | 1.74 | 2.92 | 1.26 | 0.10 | 0.31 | 0.005 |
| 6 | 0.52 | 1.69 | 3.15 | 1.27 | 0.05 | 0.36 | 0.003 |

The Hydrodynamic Force Coefficients are:

| T | | Force δ(ω,0) non-dimensional | | | Force Coefficient, $C_F$ for FLOAT program | | |
|---|---|---|---|---|---|---|---|
| (sec) | σ | sway | heave | roll | sway | heave | roll |
| 2 | 1.56 | 0.56 | 0.28 | 0.05 | 0.29 | 0.14 | 0.20 |
| 3 | 1.04 | 0.75 | 0.72 | 0.07 | 0.38 | 0.37 | 0.29 |
| 4 | 0.78 | 0.70 | 1.04 | 0.12 | 0.36 | 0.53 | 0.49 |
| 5 | 0.63 | 0.54 | 1.25 | 0.11 | 0.28 | 0.64 | 0.45 |
| 6 | 0.52 | 0.38 | 1.40 | 0.09 | 0.19 | 0.72 | 0.37 |

If the directional and short crested effects are to be included in the Hydrodynamic Force Coefficients and an exponentially decayed load correlation instead of in an SCF equation the following values from Table 4.5 would be used*

| T | | Force δ(ω,0) non-dimensional | | | Force Coefficient, $C_F$ for FLOAT program | | |
|---|---|---|---|---|---|---|---|
| (sec) | σ | sway | heave | roll | sway | heave | Roll |
| 2 | 1.56 | 0.53 | 0.15 | 0.03 | 0.27 | 0.08 | 0.12 |
| 3 | 1.04 | 0.69 | 0.59 | 0.06 | 0.35 | 0.30 | 0.25 |
| 4 | 0.78 | 0.60 | 0.94 | 0.10 | 0.31 | 0.48 | 0.41 |
| 5 | 0.63 | 0.44 | 1.18 | 0.10 | 0.23 | 0.60 | 0.41 |
| 6 | 0.52 | 0.31 | 1.31 | 0.08 | 0.16 | 0.67 | 0.33 |

* this case was not run here but makes a good comparison run.

Flexible Connectors Modeling

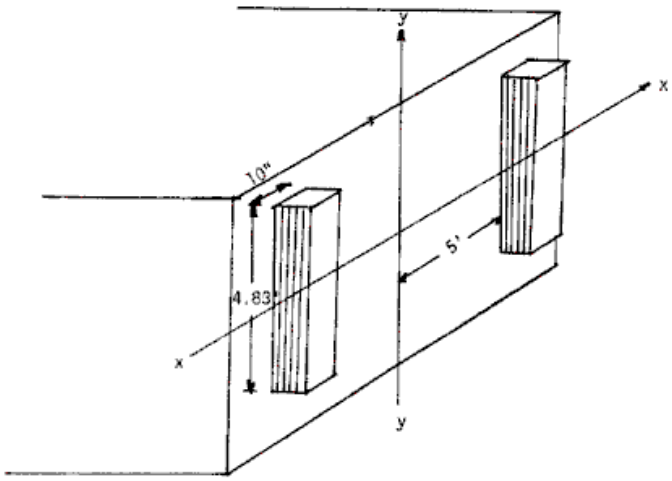


Figure 9.3

Shearing areas:

$$A_x = A_y = 2 \times \left(\frac{5}{6}\right) \times \left(\frac{10}{12}\right) \times 4.83 = 6.7 \text{ ft}^2$$

Moments of inertia:

$$I_{xx} = 2 \times \left(\frac{10}{12}\right) \times \frac{4.83^3}{12} = 15.6 \text{ ft}^4$$

$$I_{yy} = 2 \times \left(\frac{10}{12}\right) \times 4.83 \times \left(5 + \frac{5}{12}\right)^2 = 936.2 \text{ ft}^4$$

$$J = 2 \times \left(\frac{10}{12}\right) \times 4.83 \times \left(5 + \frac{5}{12}\right)^2 = 936.2 \text{ ft}^4$$

Modulus of elasticity $E = 1000 \text{ k/ft}^2$
Poisson's ratio $v = 0.48$
Shearing modulus $G = 510 \text{ k/ft}^2$

## *Example 2 of Breakwater*

Consider breakwater of Fig.

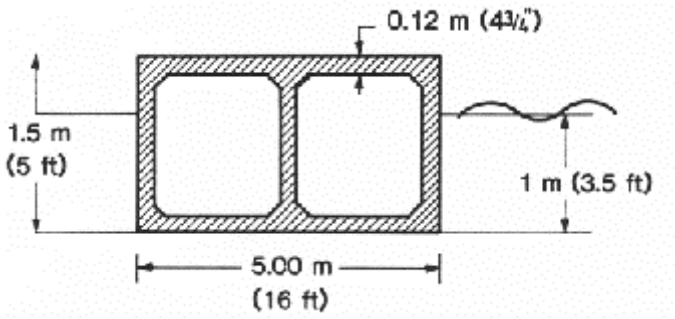


Width/draft ratio B/T = 4.00/1.00 =4
Normalize frequency factor

Converting wave period T in sec : $\sigma = \omega\sqrt{B/2g} = \frac{2\pi}{T}\sqrt{\frac{4.00}{2\times 9.81}} = \frac{2.83}{T}$

to σ normalized frequency
Cross section under water area : A=4.00 x1.00 = 4.00 m²
Distance of cross section centroid
rom free surface : C=-0.25m
Water specific mass : ρw=1000kg/m³
Acceleration of gravity : g = 9.81 m/sec²

From Fig. 6, 7, 8 or Table 2 we get for added mass and damping coefficients and existing force, in nondimensional form:

| | | Mass β(σ) | | | Damping ξ(σ) | | | Force δ(σ,0) | | |
|---|---|---|---|---|---|---|---|---|---|---|
| T (sec) | σ | Sway | Heave | Roll | Sway | Heave | Roll | Sway | Heave | Roll |
| 2 | 1.41 | 0.075 | 1.758 | 0.255 | 0.207 | 0.024 | 0.001 | 0.661 | 0.360 | 0.031 |
| 3 | 0. 5 | 0.408 | 1.560 | 0.251 | 0.254 | 0.128 | 0.001 | 0.828 | 0.790 | 0.056 |
| 4 | 0.71 | 0.766 | 1.600 | 0.255 | 0.154 | 0.248 | 0.003 | 0.710 | 1.116 | 0.095 |
| 5 | 0.57 | 0.787 | 1.782 | 0.259 | 0.079 | 0.321 | 0.003 | 0.505 | 1.31 | 0.087 |
| 6 | 0.47 | 0.740 | 1.923 | 0.261 | 0.049 | 0.353 | 0.002 | 0.391 | 1.41 | 0.076 |

And in dimensional form:

ADDED MASS : see Eq. (6.1, b, c)

| | | | Added mass | | |
|---|---|---|---|---|---|
| T sec | ω cyll/sec | σ | Sway kg/m | Heave kg/m | Roll kg m/m |
| 2 | 3.14 | 1.41 | 300. | 7032. | 4099. |
| 3 | 2.09 | 0.95 | 1632. | 6240. | 4118. |
| 4 | 1.57 | 0.71 | 3064. | 6400. | 4272. |
| 5 | 1.26 | 0.57 | 3148. | 7128. | 4340. |
| 6 | 1.05 | 0.42 | 2960. | 7692. | 4361. |

ADDED DAMPING FORCES : see Eq. (7.1, b, c)

Added damping force

| T sec | ω cyll/sec | σ | Sway kg/m | Heave kg/m | Roll kg m/m |
|---|---|---|---|---|---|
| 2 | 3.19 | 1.41 | 5590. | 1663. | 476. |
| 3 | 2.09 | 0.95 | 5980. | 5479. | 433. |
| 4 | 1.57 | 0.71 | 3416. | 8098. | 402. |
| 5 | 1.26 | 0.57 | 1423. | 9002. | 241. |
| 6 | 1.05 | 0.47 | 716. | 8667. | 129. |

HYDRODYNAMIC EXCITING FORCES : Eq. (8.1, b, c)
Wave direction θ=0°

Hydrodynamic force for unit wave amplitude

| T sec | ω cyll/sec | σ | Sway N/m | Heave N/m | Roll N.m/m |
|---|---|---|---|---|---|
| 2 | 3.19 | 1.41 | 12969. | 7063. | -2026. |
| 3 | 2.09 | 0.95 | 16245. | 15500. | -1864. |
| 4 | 1.37 | 0.71 | 13930. | 21896. | 245. |
| 5 | 4.26 | 0.37 | 9908. | 25702. | 937. |
| 6 | 1.03 | 0.47 | 7671. | 27664. | 1064. |

For the case of directional waves depending on the choice of spreading function the coefficients are evaluated from Tables 4, 5 and 6.

# 13. List of Figures


2.1.a Structure Idealization
2.1.b Stiffness and Mass Matrices
2.2 Connector Idealizations
3.1.a Hydrodynamic Mass Coefficients (rectangular cross section B/T=4)
3.1.b Hydrodynamic Damping (rectangular cross section B/T=4)
3.1.c Hydrodynamic Exciting Force(rectangular cross section B/T=4)
3.2.a Hydrodynamic Mass (rectangular cross section B/T=6)
3.2.b Hydrodynamic Damping (rectangular cross section B/T=6)
3.2.c Hydrodynamic Exciting Force (rectangular cross section B/T=6
3.3.a Hydrodynamic Mass(rectangular cross section B/T=8
3.3.b Hydrodynamic Damping(rectangular cross section B/T=8
3.3.c Hydrodynamic Exciting Force (rectangular cross section B/T=8
3.4.a Hydrodynamic Exciting Force for Different Wave Directions (rectangular cross section B/T=4
3.4.b Hydrodynamic Exciting Force for Different Wave Directions (rectangular cross section B/T=6)
3.4.c Hydrodynamic Exciting Force for Different Wave Directions (rectangular cross section B/T=8)
4.1 "Spatial Correlation Factor vs. Ration of Nodal Distance to Wave
4.2 Wave Coherence Functions
4.3 Wave Coherence for Directional Spectrum $S(f,\theta) = S(f)\cos n(\theta-\theta o)$ Wind Direction on Curves
5.1 Number of Random Load Samples: 8
5.2 Number of Random Load Samples: 16
5.3 Number of Random Load Samples: 24
6.3.a Response to Unit Amplitude Waves
6.3.b Wave Spectrum
6.4 Nodal Wave Loading
8.1 Boat Wake (Tm/T=9)
8.2 Boat Wake Loading
8.3 Linear Displacement Field for Node
8.4 Floating Breakwater Boat Wake 15 mph Computer Run Structure and Wave Characteristics
8.4.b Floating Breakwater Boat Wake 15 mph Sway Mode Shapes and Natural Periods
8.4.c Floating Breakwater Boat Wake 15 mph Sway Response to Boat Wake
8.4.d Floating Breakwater Boat Wake 15 mph Sway Response to Wave Time Series
9.2 Pontoon Cross Section
9.3 Flexible Connectors Modeling

# 14. List of Symbols

The following is a list of symbols which are most commonly used in the text. Other symbols used are defined in the text when they first appear.

A Underwater cross-section area, Ac cross-section area

ao Normalized cross-section area ( $a_o = A/(B/2)^2$ ) (underwater)

B Cross-section width

C Centroid of cross-section

C Centroid of cross-section

$C_F^S, C_F^H, C_F^R$ Hydrodynamic Force Coefficients defined by Eqs. 3.2 a, b, c.

C Distance of centroid to free surface (positive upwards)

D Depth of fluid region

d Normalized depth (d = D/(B/2))

E, Ep, Ec Moduli of elasticity, subscripts for pontoons or connectors

EI Flexural rigidity

e Normalized modulus of elasticity

$$e = 2E/\rho_w \cdot gB$$

F Cut-off frequency, force f Frequency in Hz, force per unit length

H Wave height, H(t) = 2η(t)

H Significant wave height (H1/3)

Ixx, Iyy Cross section moment of inertia

ixx, iyy Normalized momerrt of inertia

Io Cross-section polar moments of inertia

$$I_o = \int\int_{Ac} r^2 dA$$

g Acceleration of gravity

k Wave number (k = 2π/λ = ω2/g)

kj lateral stiffness normalized

$$k_j = 4k_j / \rho_w g B^2$$

γ Coherence

δ, δ(ω) Hydrodynamic force coefficient - nondimensional

$\bar{\delta}(\omega)$ Non-dimensional hydrodynamic force coefficient including directional effects

n Wave surface height from mean (η = η(t))

θ Wave direction relative to bridge axis

λ Wave length

$\xi, \xi_H^S, \xi_H^R, \xi_V^S, \xi_V^H, \xi_V^R$ Percent of critical damping, subscript for hydrodynamic or virtual mass, superscript for sway, heave and roll

ρω Water specific mass

σ Normalized frequency

$$\sigma = \omega\sqrt{B/2g}$$

Φ Wave potential

φ Nondimensional wave potential

ω Cyclic frequency

L Bridge length
Li nodal distance from node i to i+1
Lij nodal distance from node i to j
l normalized distance ( l = L/(B/2))
M Moment
m mass per unit length, moment per unit length
N1(z), N2(z), Ni(z) Displacement functions
O Origin of axis on freewater surface
Ri Nodal loads
$R_{R_i R_j}(\tau)$ Correlation between Ri and Rj
$R_f(z_1, z_2, \tau)$ Correlation between forces at distances Z1 and Z2
ri Nodal distance
S(ω), S(f) SPectrum
$S\omega(\omega), S\omega(f)$ Wave Spectrum
$S_{\omega(AB)}(\omega)$, $S_{\omega(z_1 z_2)}(\omega)$ Wave cross-spectra between points A and B or Z1 and Z2
$S_{f(z_1 z_2)}(\omega)$ Force cross-spectra between points Z1 and Z2
T Cross-section draft, wave period
t Time variable
X, Y, Z Coordinates
x, y, z Normalized coordinates (i.e., x = X/(B/2))
A Underwater cross-section area, Ac cross-se
ao Normalized cross-section area ( $a_o = A/(B/2$ (underwater)
B Cross-section width
superscript for sway, heave and roll

# 15. List of Tables

3.1 Hydrodynamic Coefficients,Tabulated Results of Figures 3.1, 3.2, 3.3
3.2 Hydrodynamic Exciting Forces for Different Wave Angles, Tabulated Results of Fig. 3.4
4.5.a Hydrodynamic Force Coefficients, including directional effect B/T=4
4.5.b Hydrodynamic Force Coefficients, including directional effect B/T=6
4.5.c Hydrodynamic Force Coefficients, including directional effect B/T=8
4.1 Results of Program COHER for and Coefficients Fitting Eq . 4.3 to Curves of Fig. 4.3

# 16. References


1. Bathe, K.J and E.L. Wilson. Numerical Methods in Finite Element Analysis. Prentice-Hall, Inc. Englewood Cliffs, N.Y., 1976.
2. Beauchamp, C.H. and D.N. Brocard. "Dynamic Response of Floating Bridge to Wave Forces," Second ASCE/EMD Specialty Conference on Dynamic Response of Structures, Atlanta, GA, Jan. 15-16, 1981.
3. Bendat, F. and A.G. Piersol. Random Data Analysis and Measurement Procedures. Wiley-Interscience, New York, N.Y., 1971.
4. Borgman, L.E. "Ocean Wave Simulation for Engineering Design, "J. ASCE WW4, Nov. 1960, pp 557-583.
5. Clough, R.W. and J. Penzie , Dynamic of Structures. McGraw-Hill, New York, 1975.
6. Georgiadis, C. "Wave Induced Vibration of Continuous Floating Structures," Ph.D. dissertation, Univ. of Washington, 1981.
7. Gould, P.L. and S.H. Abu-Sitta. Dynamic Response of Structures to Wind and Earthquake Loading, Halsted Press, John Wiley, New York, 1980.
8. Handbook of Wave Analysis and Forecasting, World Meterological Organization, Geneva, Switzerland, 1976.
9. Hartz, B.J. "Summary Report on Structural Behavior of Floating Bridges," June 1972, Dept. of Civil Engineering, University of Washington, Report to Washington State Department of Highways, Contract Y-909, 2 volumes.
10. Hartz, B.J., and B. Mukherji, "Dynamic Response of a Floating Bridge to Wave Forces," Proc. International Conference on Bridging Rion-Antirion. Patras, Greece, Sept. 1977.
11. Hartz, B.J. "Dynamic Response of the Hood Canal Floating Bridge" Proceedings Second ASCE/EMD Specialty Conference on Dynamic Response of Structures,Atlanta, GA, Jan. 15-16, 1981
12. Hartz, B.J. "The Hood Canal Bridge Failure, A Report of an Independent Investigation," Sept. 1979 and Nov.1979, to the Washington State Transportation Commission.
13. Hartz, B.J. "Notes on the Spatial Correlation Factor; " University of Washington, Seattle, WA, June 1980, unpublished.
14. Holand, I., I. Langen, and R. Sigbjornsson, "Dynamic Analysis of Curved Floating Bridge," IABSE Proceedings P-5/77, 1977.
15. Ippen, A.I. Estuary and Coastline Hydrodynamics, McGraw-Hill, New York, 1966.
16. Langen, I. and R. Sigbjornsson. "On the Stochastic Dynamics of Floating Bridges," J. Eng. Structures. Oct. 1980, Vol. 12, pp 209 216.
17. Langen, I. "Frequency Domain Analysis of a Floating Bridge Expose to Irregular Short-Crested Waves," SINTEF Report, Trondheim, 1980.
18. Mukherji, B. "Dynamic Behavior of a Continuous Floating Bridge," Ph.D. Dissertation, University of Washington, 1972.
19. Newman, J.N. Marine Hydrodynamics. MIT Press, Cambridge Massachusets, 1980.
20. Seltzer, G."Wave Crests--How Long?" Dept of Civil Engineering, University of Washington, Seattle, Oct. 1979.
21. Seymour, R.J. "Estimating Wave Generation on Restricted Fetches," J. ASCE WW2 May 1977, pp 251-263.
22. Shinozuka, M. "Monte Carlo Simulation of Structural Dynamics" International Journal of Computers and Structures, Vol. 2, 1972, pp 855-874.
23. Vugts, J.H. The Hydrodynamic Forces and Ship Motions, Vitgererij Waltman Delf, 1970.
24. Zienkiewicz, D.C. The Finite Element Method in Engineering Science, McGraw-Hill, London, 1971.
25. Georgiadis, C. and Hartz, B.J., " A Computer Program for the Dynamic Analysis of Continuous Floating Structures in Short Crested Waves ", Proceedings of Second Conference on Floating Breakwaters, October 19-20, Seattle Washington, 1981
26. Georgiadis, C. and Hartz, B.J., " A Boundary Element Program for the Computation of Three-Dimensional Hydrodynamic Coefficients ", Proceedings of the International Conference on Finite Element Methods, Shanghai, China, August 2-6, 1982, Gordon and Beach Science Publishers, Inc. New York, pp. 487-492

27. Hartz, B.J. and Georgiadis, C., " A Finite Element Program for Dynamic Analysis of Continuous Floating Structures in Short Crested Waves ", Proceedings of the International Conference on Finite Element Methods, Shanghai, China, August 2-6, 1982, Gordon and Beach Science Publishers, Inc. New York, pp. 493-498.
28. Georgiadis, C. and Hartz, B.J., " Theory and Experiment for the Response of Long Floating Structures ", Proceedings of the International Symposium on Offshore Engineering, Rio de Janeiro Brazil, September 12-16, 1983, Pentech Press London, pp. 439-459.
29. Georgiadis, C. " CGFLOAT A Computer Program for the Dynamic Analysis of Floating Bridges and Breakwaters ", journal of Advances in Engineering Software, Vol. 5, No. 4, October 1983, CML Publication Southampton, England, pp. 215-220.
30. Georgiadis, C. " Finite Element Modelling of the Response of Long Floating Structures Under Harmonic Excitation ", Offshore Mechanics and Arctic Engineering, proceedings of American Society of Mechanical Engineers ASME book I00171, Vol.1, 1984, New York, pp. 246-252.
31. Georgiadis, C., " Time and Frequency Domain Analysis of Marine Structures in Short-Crested sea by Simulating Appropriate Nodal Loads ", Offshore Mechanics and Arctic Engineering, proceedings of American Society of Mechanical Engineers ASME book I00171,Vol.1, 1984, New York, pp. 177-183.
32. Georgiadis, C., " Modelling Boat Wake Loading on Long Floating Structures ",Journal of computers and structures, Vol.18,No. 4,1984, Pergamon Press, London, pp. 575-581.
33. Georgiadis, C., " CGHYDRO a Boundary Element Program for the Computation of Hydrodynamic Forces on Long Floating Structures ", Journal of Advances in Engineering Software, Vol.6, No.3, July1984, CML publication, Southampton, England, pp. 164-167.
34. Georgiadis, C., " Finite Element Modeling of the Response of Long Floating Structures Under Harmonic Excitation ", Transactions of ASME, Journal of Energy Resources Technology, Vol. 107, March 1985, pp. 48-53.

# 17. Documents

Unfortunately Html help does not allow links to external files, but you can find folowing publications in pdf format here: C:\Program Files\RUNET\cgFLOAT\DOC

**CGFLOAT.pdf**

29) Georgiadis, C. " **CGFLOAT A Computer Program for the Dynamic Analysis of Floating Bridges and Breakwaters** ", journal of Advances in Engineering Software, Vol. 5, No. 4, October 1983, CML Publication Southampton, England, pp. 215-220.

**Finite element modelling.pdf**

30) Georgiadis, C. " **Finite Element Modelling of the Response of Long Floating Structures Under Harmonic Excitation** ", Offshore Mechanics and Arctic Engineering, proceedings of American Society of Mechanical Engineers ASME book I00171, Vol.1, 1984, New York, pp. 246-252.

**Time and frequency domain analysis.pdf**

31) Georgiadis, C., " **Time and Frequency Domain Analysis of Marine Structures in Short-Crested sea by Simulating Appropriate Nodal Loads** ", Offshore Mechanics and Arctic Engineering, proceedings of American Society of Mechanical Engineers ASME book I00171,Vol.1, 1984, New York, pp. 177-183.

**Modelling boat wake loading.pdf**

32) Georgiadis, C., " **Modelling Boat Wake Loading on Long Floating Structures** ",Journal of computers and structures, Vol.18,No. 4,1984, Pergamon Press, London, pp. 575-581.

**cghydro.pdf**

33) Georgiadis, C., " **CGHYDRO a Boundary Element Program for the Computation of Hydrodynamic Forces on Long Floating Structures** ", Journal of Advances in Engineering Software, Vol.6, No.3, July1984, CML publication, Southampton, England, pp. 164-167.